

User Manual

Original instructions

AS380/15B-EU

AS380/15B-UK



ENGLISH	USER MANUAL	1-12
DEUTSCH	BETRIEBSANLEITUNG	13-24
FRANÇAİS	MODE D'EMPLOI	25-36
NEDERLANDS	GEBRUIKSAANWIJZING	37-48
ITALIANO	MANUALE D'ISTRUZIONI	49-60
ESPAÑOL	USER MANUAL	61-72
PORTUGUÊS	MANUAL DO USUÁRIO	73-84
ΕΛΛΗΝΙΚΆ	ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΤΗ	85-98
ČESKÝ	UŽIVATELSKÝ MANUÁL	99-110
SLOVENSKÝ	NÁVOD NA POUŽITIE	111-120
POLSKI	INSTRUKCJA OBSŁUGI	121-132
MAGYAR	FELHASZNÁLÓI KÉZIKÖNYV	133-144
ROMÂNĂ	MANUAL DE UTILIZARE	145-156
РУССКИЙ	РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ	157-168
БЪЛГАРСКИ	РЪКОВОДСТВО НА ПОТРЕБИТЕЛЯ	169-180
DANSK	BRUGERMANUAL	181-192
SVENSKA	BRUKSANVISNING	193-204
NORSK	BRUKERHÅNDBOK	205-216
SUOMI	KÄYTTÖOPAS	217-228

Company information: <u>www.vipercleaning.eu</u> info-eu@vipercleaning.com



SAFETY PRECAUTIONS

This machne is intended for commercial use. It is constructed for use in an indoor environment and is Not intended for any other use. Use only with recommended accessories.

All operators shall read, understand and exercise the following safety precautions:

1) DO NOT OPERATE MACHINE:

Unless trained and authorized. Unless you have read and understand the operators manual. In flammable or explosive areas. If not in proper operating condition. In outdoor areas.

2) BEFORE OPERATING MACHINE:

Make sure all safety devices are in place and operate properly.

3) WHEN USING MACHINE:

Go slow on inclines and slippery surfaces. Follow all safety guidelines. Be very careful when using the machine in reverse. Report and fix any damage to machine prior to operating it.

4) BEFORE LEAVING OR SERVICING MACHINE:

Stop machine on level ground. Turn machine off.

5) WHEN SERVICING MACHINE:

Read operators manual thoroughly prior to operating or servicing this machine. Use manufacturer supplied or approved replacement parts. Secure machine with wheel blocks prior to jacking the machine up. Use approved jack or hoist to safely elevate the machine.

WHEN SERVICING MACHINE:(con't)

Disconnect batteries prior to working on machine. Wear gloves when handling batteries or battery cables. Avoid any contact with battery acid. Avoid moving parts, Do not wear loose fitting clothing while servicing machine.

	WARNING!
<u> </u>	Batteries emit hydrogen gas.Explosion or fire can result from hydrogen gas. Keep Sparks and open flames away! Keep battery compartment open when charging.
\wedge	WARNING! Flammable materials can cause an explosion or fire. Do not use flammable materials In tanks.
\wedge	WARNING ! Flammable materials or reactive metals can cause explosion or fire .Do not pick up.

MACHINE SET UP&INSTALLATION

UNCRATING MACHINE

Be sure and check packing carton for any damage. Immediately report any damage to carrier. Check contents of package to ensure that the following items are included:

- 1. Machine
- 2. Batteries(x2)
- 3. Squeegee assembly
- 4. Scrubber-dryer User Manual
- 5. Electric Battery Charger Manual (if equipped)
- 6. connecting wire for battery and charger (if equipped)
- 7. brush or pad driver (if equipped)

BATTERY DISASSMBLY AND INSTALLATION

- 1. Switch off the main switch (47).
- 2. Remove the recovery tank (2) as shown in the relevant paragraph.
- 3. Unscrew the bolt from batteries (16), then remove or change.
- 4. Install the batteries on the machine according to the diagram below.
- 5. Install the recovery tank.



WARNING

Do not connect⁺ to+, or - to-, when disassembly or install the batteries. It is very dangerous.



Battery charging

Charge the batteries (see the procedure in Maintenance chapter).

MACHINE SET UP

Pre-operation checks

- 1. Sweep or dust mop the surface to be cleaned.
- 2. Check that squeegee is properly installed.
- 3. Lower the squeegee (33) with the lever (26).
- 4. Check battery are fully charged.(see BATTERY CHARGIN)
- 5. Check that brush/pad is properly installed.

Brush/Pad driver installation and disassembly



NOTE

Only install manually. If auto-installation, it will wear brush hub. Make sure that the tanks are empty before disassembling the brush.

- 1. Turn off the machine.
- 2. Lay down the machine in this position as indicated in the figure2, Pull up the lift lever (26) to raise the squeegee up (33).
- 3. Mount the brush or pad driver onto the drive wheel hub and then rotate counterclockwise until it locks, as indicated in the figure 3.
- 4. To remove the brush/pad, rotate the brush/pad clockwise until it is released from drive wheel hub.



WARNING

Do not turn on the machine in this position as below. The brush/pad could disengage and cause injury.



Squeegee installation

- 1. Turn off the machine (47).
- 2. Pull down the squeegee lift lever (26) to put down the squeegee on the "working" position.
- 3. Lay down the machine in this position as indicated in the figure2.
- 4. Loosen the two knobs (55) on the squeegee and slide the squeegee into the slots of squeegee brackets

Tighten the knobs securely (unscrew the knobs, if disassembly).

5. To replace the front/rear squeegee (56/57), unscrew the thumb nut (37).

USER MANUAL



Solution tank filling



NOTE

The machine can be filled with a with pipe or bucket. Do not remove the Solution filter (21) while filling.

- 1. Fill water into solution tank (3) from the inlet (20) through pipe or bucket
- 2. Do not fill the solution tank completely, leave a few centimeters from the edge.
- 3. The water temperature must not exceed 40° C.



CAUTION!

Use only low-foam and non-flammable detergents, intended for automatic scrubber applications

Solution tank draining



Solution tank should be drained and cleaned after each scrubber operation is completed.

- 1. Unscrew the drain cap (22) on the bottom of solution tank. The solution/water will flow freely into a bucket or floor drain.
- 2. Rinse the solution tank with clean water after every use. This will help prevent chemical build up and clogging of the solution lines
- 3. Screw up the drain cap (22).

Recovery tank draining

NOTE



Recovery tank should be drained and cleaned after each scrubber operation is completed.

- 1. Turn the latch (17) off the recovery tank, take off the recovery tank from machine by grasping two grooves of tank. Open the lid (1) and overturn the recovery tank to drain the dirty water into a container, or unscrew the drain cap (22) to let water pipe out to a bucket.
- 2. Clean and Rinse the recovery tank with clean water after every use.
- 3. Re-place the recovery tank on the machine and turn the latch (17) to lock the tank..

MACHINE OPERATION

- 1. Set the handle to a comfortable height by pressing level (25).
- 2. Lower the squeegee (33) onto the floor by pulling down the lift mechanism (26).

- 3. Turn on the main switch (47).
- 4. Turn on the brush motor switch (48) and the solution switch (50), the indicate light will be on.
- 5. Turn on the vacuum motor switch (49), the indicate light will be on.
- 6. If necessary, adjust the water flow by turn the ball valve (31) manually
- 7. Pull one or both operating triggers (24), and then brush will start to spin, solution will begin to flow. Move the machine and start cleaning,

NOTE

If the battery indicator light (51) is green, the machine can be used. If it is yellow or red, the batteries must be charged.

\wedge	CAUTION! Before lifting the brush, turn it off by pressing the switch (47).
À	CAUTION! When cleaning excessively aggressive floors or others this could cause the machine do not work, brush motor and vacuum indicators on the Control panel(46) flashing simultaneously. It means the machine being overloaded. Please turn off all the switches on the Control panel (46).
\bigwedge	CAUTION! Do not use the machine with discharged batteries to avoid damaging the batteries and reducing the battery life.

AFTER USING THE MACHINE

After scrubbing, please proceed with below actions before leaving the machine:

- 1. Remove the brush/pad-holder.
- 2. Empty the tanks as shown in the previous parsagraph.
- 3. Perform the daily maintenance procedures (see the maintenance chapter)
- 4. Store the machine in a clean and dry place, with the brush/pad-holder and the squeegee
- 5. If storing in an area which may reach freezing temperatures, be sure to drain all fluids from the machine prior to storage. any damage caused by freezing temperatures will not be covered by the warranty.

MACHINE NOT BEING USED FOR LONG PERIODS

If the machine is not going to be used for more than 30days, please proceed with below actions:

- 1. Perform the procedures shown in 'After Using the Machine paragraph'.
- 2. Disconnect the battery connector.

MAINTENANCE

The lifespan of the machine and its maximum operating safety are ensured by correct and regular maintenance. The following chart provides the scheduled maintenance. The intervals shown may vary according to particular working conditions, which will be defined by the person in charge of the maintenance.



WARNING

Maintenance procedures must be performed with the machine switched off and the batteries/battery charger cable disconnected. Moreover, carefully read the instruction in the Safety chapter.

All scheduled or extraordinary maintenance procedures must be performed by qualified personnel, or by

USER MANUAL

an authorized Service Center.

This Manual describes only the easier and most common maintenance procedures.

For other maintenance procedures shown in the Scheduled Maintenance Table, refer to the Service

Manual that can be consulted at any Service Center.

SCHEDULED MAINTENANCE TABLE

Procedure	Daily, after	Weekly	Every six	yearly
	using the		mouths	
	machine			
Battery charging				
Squeegee cleaning				
Brush cleaning				
Tank and vacuum grid with float cleaning, the				
cover gasket check				
Squeegee blade check and replacement				
Solution filter cleaning				
Out-water pipe filter cleaning				
Screw and nut tightening check			(1)	
rotary parts getting lubricant			(1)	
Brush/Pad-holder motor carbon brush check or				(2)
replacement				
Vacuum system motor carbon brush check or				(2)
replacement				

(1) And after the first 8 working hours.

(2) This maintenance procedure must be performed by an authorized viper Service Center.

BATTERY CHARGING

0	NOTE Charge the batteries when the yellow or red indicator (51), or at the end of every working cycle.
\wedge	CAUTION! Keeping the batteries charged make their life last longer.
\wedge	CAUTION! If the machine is not equipped with on-board battery charger, choose an external battery charger suitable for the type of batteries installed.
\wedge	WARNING! Please use viper approved charger to charge the battery
\wedge	WARNING ! Pay careful attention when charging WET batteries as there may be battery fluid leakages. The battery fluid is corrosive. If it comes in contact with skin or eyes, rinse thoroughly with water and consult a physician.

- 1. Place charger and machine in a well ventilated area.
- 2. Turn machine off (47).
- 3. Take away the recovery tank (2), Exposing battery compartment.
- 4. Plug the charging cable to the grounded wall outlet (100v~240v).. Connect the charging cable to the machine socket.
- 5. The charging indicator light (30) turn on means It is in charging, green light means battery charging is completed.
- 6. Upon the completion of charging, first unplug the charging cable from the wall outlet and then disconnect from machine.
- 7. Replace the recovery tank.



NOTE

For further information about the operation of the battery charger (29), see the relevant paragraph.

SQUEEGEE CLEANING

0	NOTE The squeegee must be clean and its blades must be in good condition in order to getting a good drying performance.
$\underline{\mathbb{N}}$	CAUTION! It is advisable to wear protective gloves when cleaning the squeegee because there may be sharp debris.

SQUEEGEE BLADE CHECK AND REPLACEMENT

- 1. Take off the squeegee as shown in the previous paragraph.
- 2. Check to see if the edge of the front/rear blades are cracked or split, if necessary replace them with new.
- 3. Unscrew six the thumb nut (37) to get off the blades.
- 4. Check the front/rear blades for integrity, cut and tears. If they are not adequate, overturn or replace them.
- 5. Install the squeegee in the reverse order of removal.

BRUSH /PAD DRIVER CLEANING



CAUTION!

It is advisable to wear protective gloves when cleaning the brush/pad because there may be sharp debris.

- 1. Remove the brush/pad as shown in the previous paragraph.
- 2. Clean and wash the brush/pad with water and detergent.
- 3. Check the brush bristles for integrity and wearing status; if necessary, replace the brush.
- 4. Check the pad for wearing status; if necessary, replace the pad driver.

TANK/VACUUM GRID WITH FLOAT CLEANING AND COVER GASKET CHECK



CAUTION!

It is advisable to wear protective gloves when cleaning the tank and vacuum/suction assembly because there may be sharp debris.

USER MANUAL

- 1. Move the machine to the appointed disposal area.
- 2. Turn off the main switch (47).
- 3. Take off the recovery tank (2), clean and rinse both solution/recovery tank, and drain out.
- 4. Take off all vacuum kits, gasket, filter, clean and re-install.

5. Check the recovery tank lids gasket ring and the vacuum rubber connector (18) between two tanks are integrity or not..



NOTE

The gasket ring of recovery tank and the rubber connector between two tanks create vacuum in the tank. If necessary, replace them.

MACHINE STRUCTURE

- 1. Recovery tank lid
- 2. Recovery tank
- 3. Solution tank
- 4. Brush cover
- 5. Protective rollers
- 6. Brush
- 7. Front handle shell
- 8. Control panel
- 9. Rear handle shell
- 10. Handle rubber
- 11. Handle iron pipe
- 12. Squeegee vacuum assembly
- 13. Squeegee suction assembly
- 14. Left positioning
- 15. Right positioning
- 16. Batteries
- 17. Latch
- 18. Rubber sealing
- 19. Limit hose joint
- 20. Inlet
- 21. Solution filter
- 22. Solution tank drain
- 23. Wheels on fixed axle
- 24. Handle left and right
- 25. Handle rotate lever
- 26. Squeegee lift lever
- 27. Squeegee string
- 28. Box circuit
- 29. Charger
- 30. Battery charge indicator
- 31. Solution flow control lever
- 32. Electromagnetic valve data
- 33. Squeegee

- 34. Squeegee hose
- 35. Squeegee wheels
- 36. Axle
- 37. Thumb nut
- 38. Vacuum system motor
- 39. Brush motor
- 40. Drive belt
- 41. Belt
- 42. Squeegee rotation plate
- 43. Squeegee lift plate
- 44. Squeegee fixing plate
- 45. Motor fixing plate





Control panel



51. Electric quantity indicator

52. Brush motor indicator

53. Vacuum motor indicator

54. Suction Electromagnetic valve data indicator

- 46. Control panel
- 47. Main switch
- 48. Brush motor switch
- 49. Vacuum motor switch
- 50. Suction Electromagnetic valve data switch

TECHINICAL DATA

Machine length*width*height	770x500x550MM
Solution tank capacity	15L
Recovery tank capacity	15L
Wheel diameter	254MM
Brush motor data	24V 250W
Vacuum motor data	24V 300W
Electromagnetic valve data	24V
Maximum gradient	2%
Sound lever	68 dBA
Batteries data	(2X12V) 24V 35Ah/20h
Power cable length	/
Batteries spec	196 x 130 x 175mm
Working capacity, up to	1000mm H ₂ O
Cleaning productivity	750m ² /hour
Squeegee width	490mm
Brush diameter	380mm
Brush rpm	150rpm
	Input 100-240
Charger	Vac, 50-60HZ
	Output 24Vdc, 5A
Operating Weight	60kg
Gross Weight	65kg
Carton spec	780x145x590MM