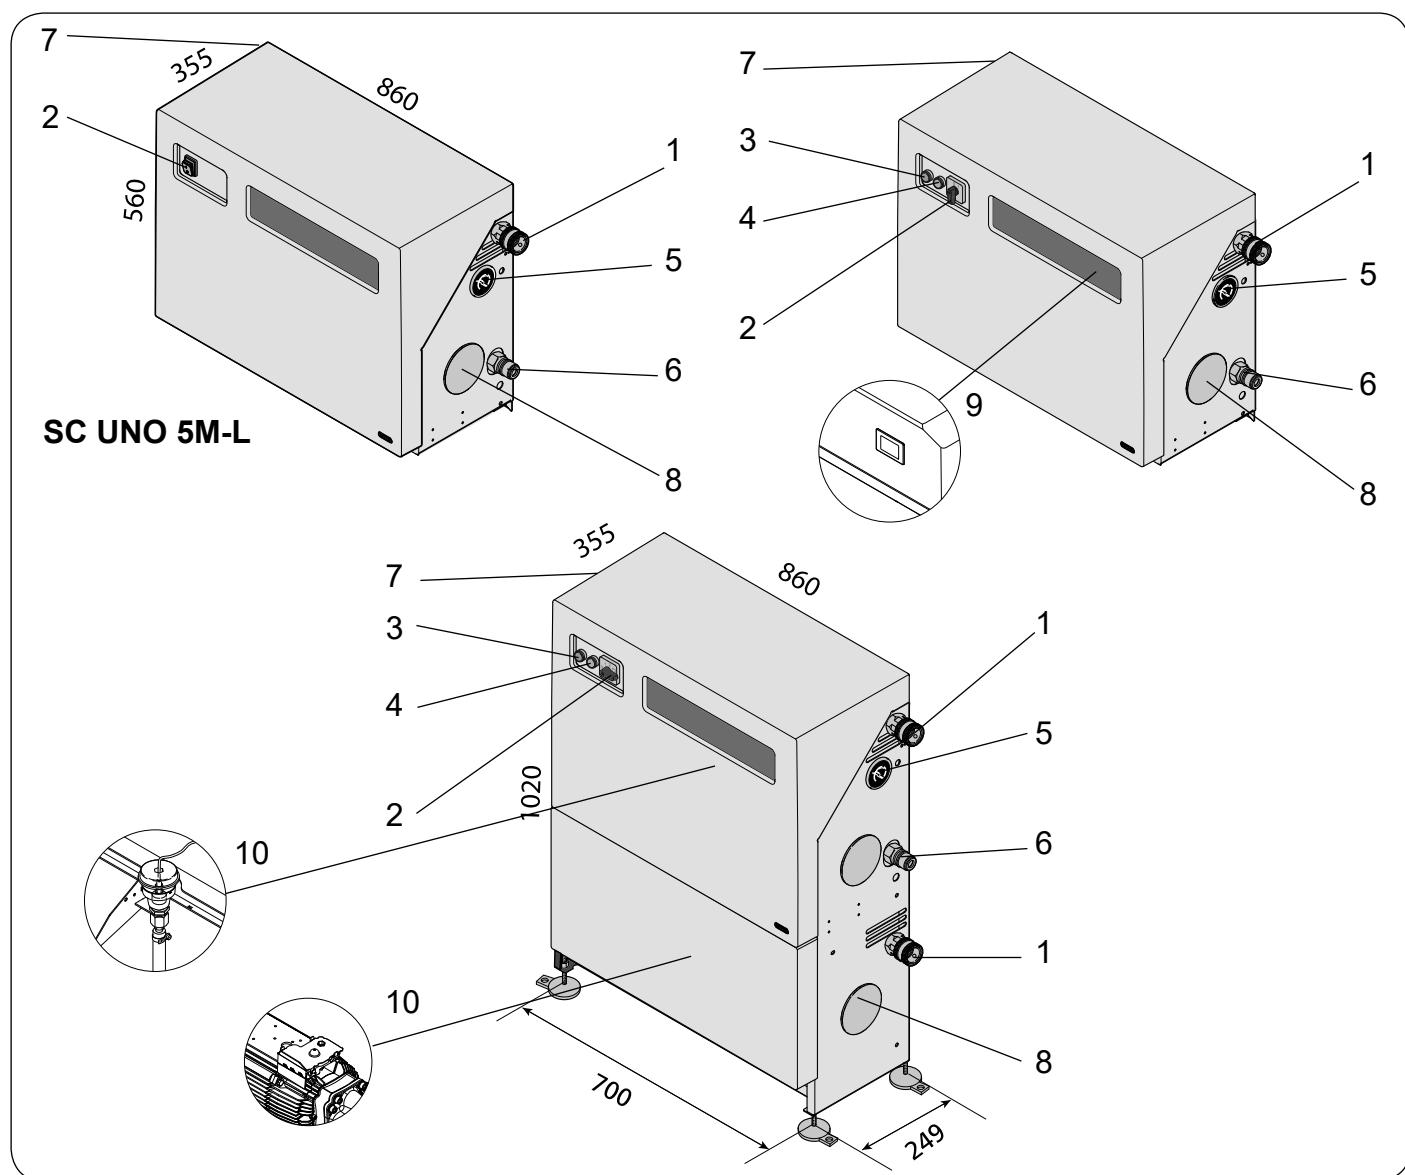
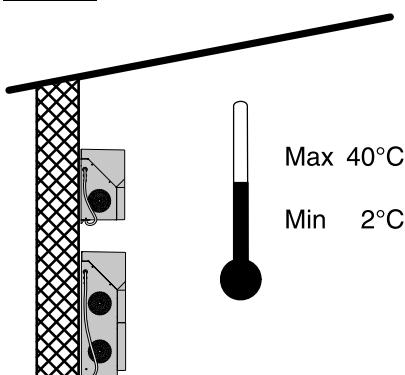
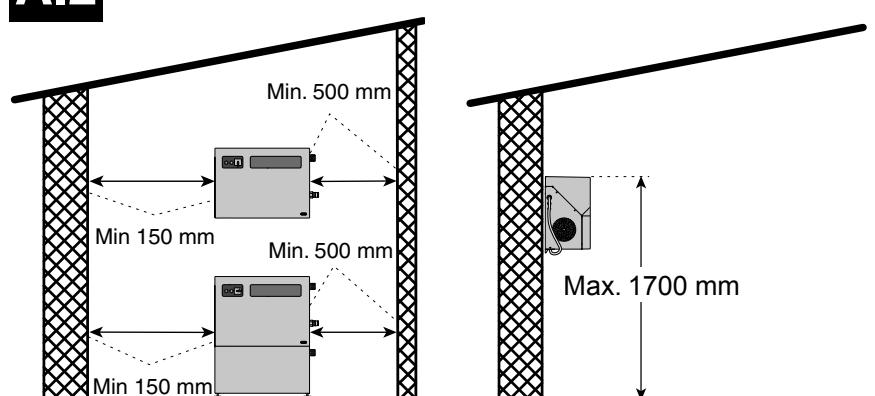


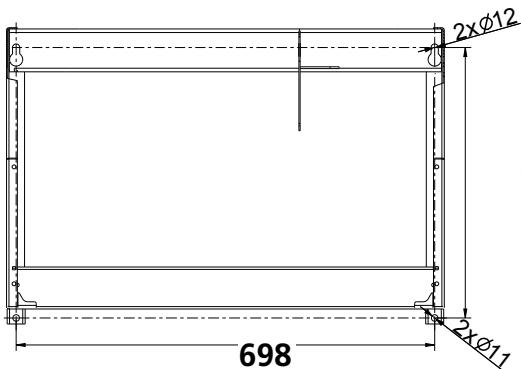
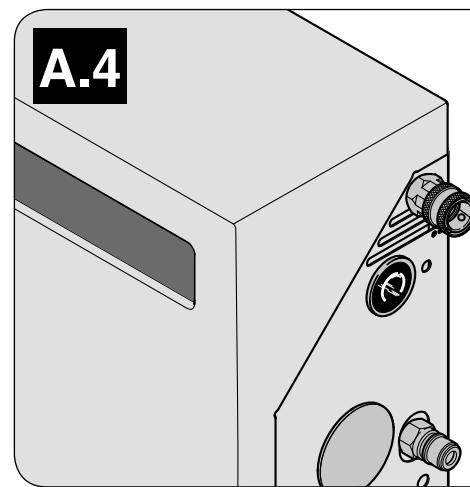
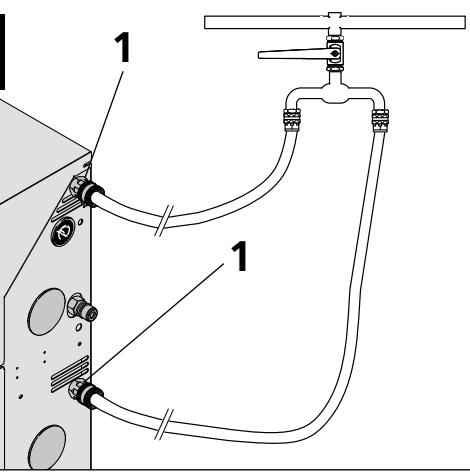
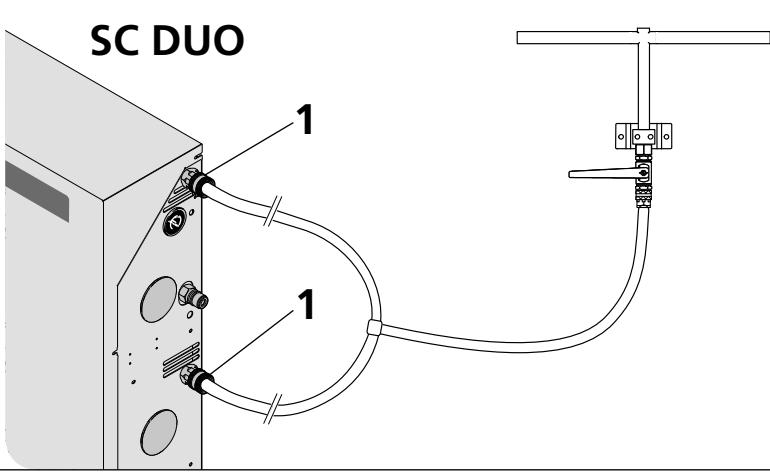
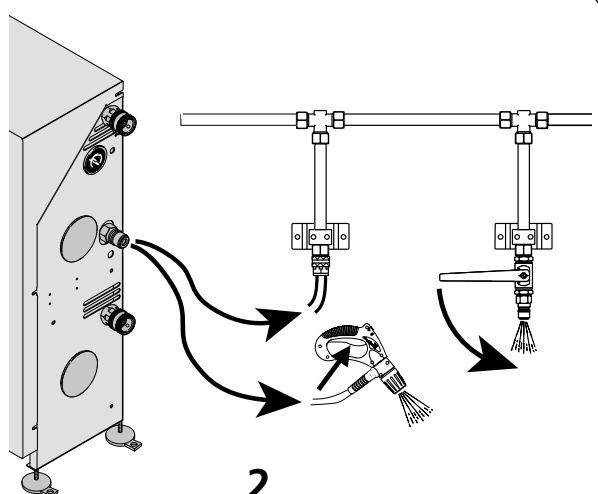
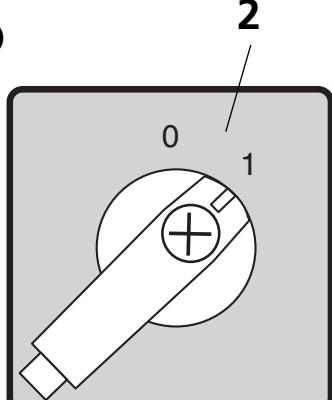
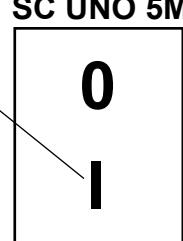
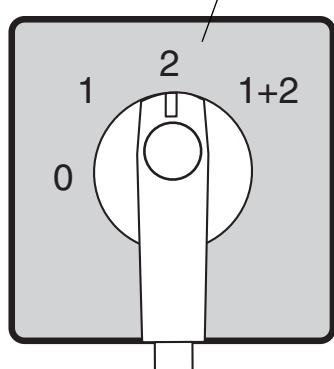
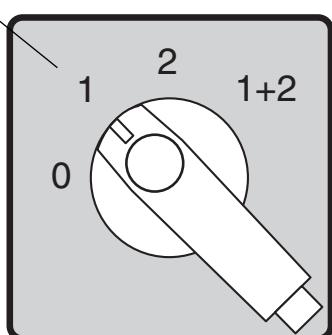
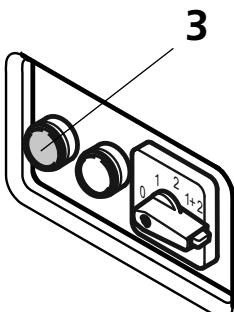
# SC UNO/DUO

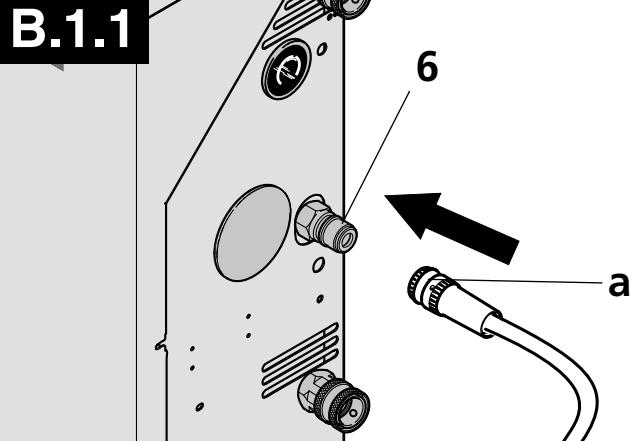
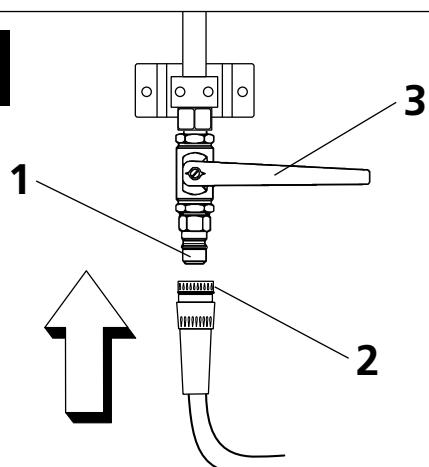
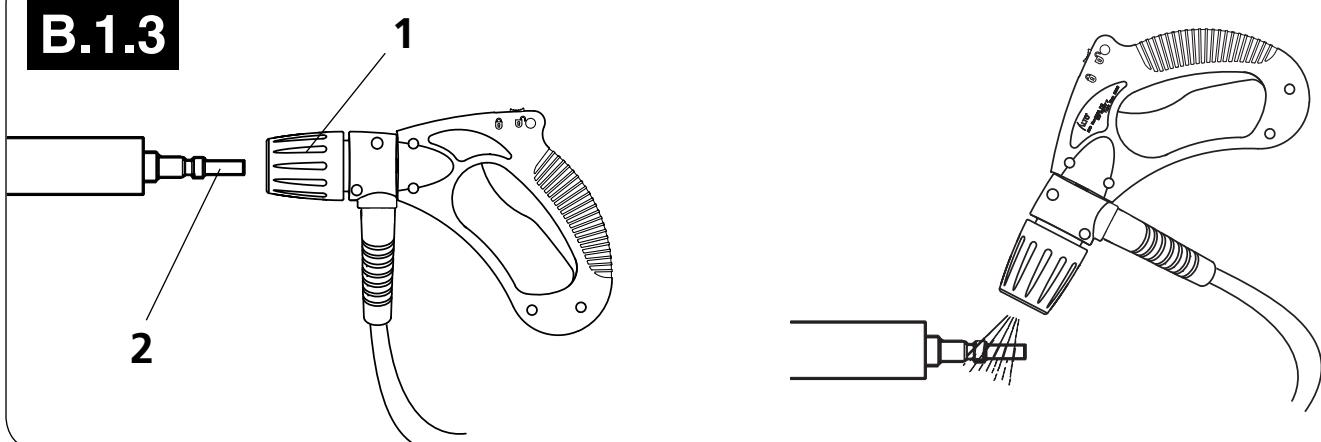
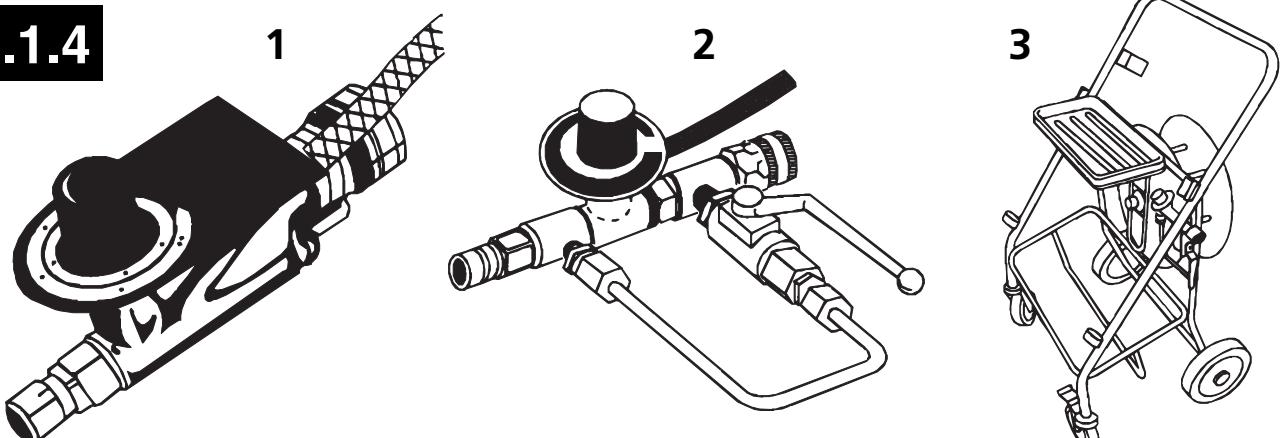
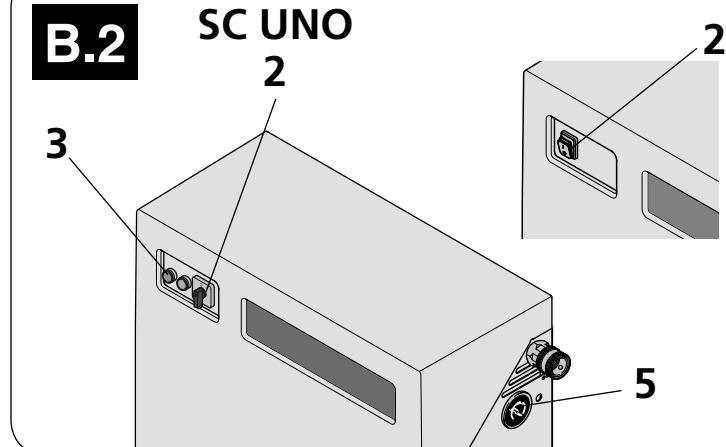
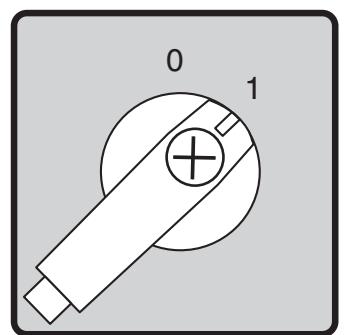
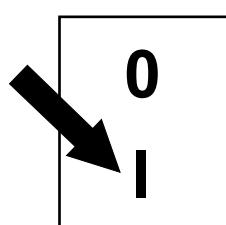
## Instructions for use

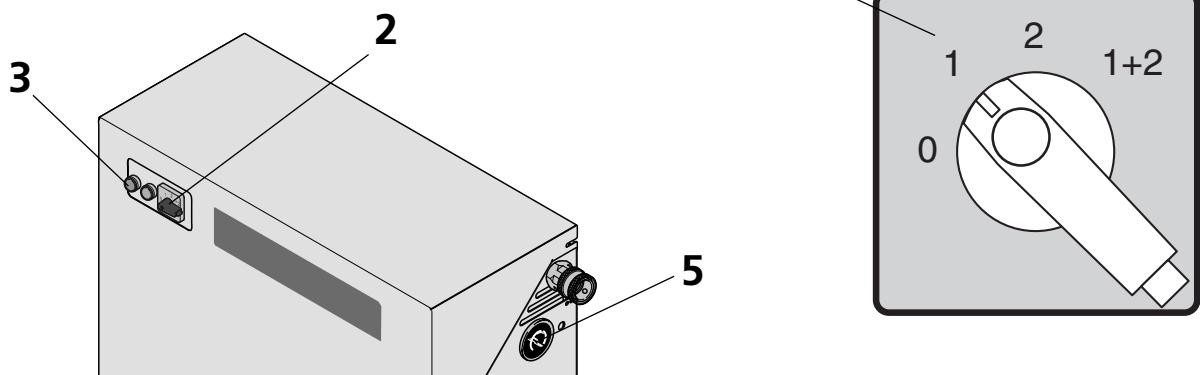
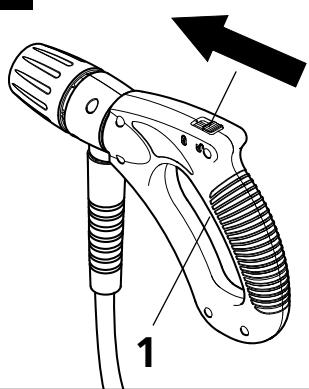
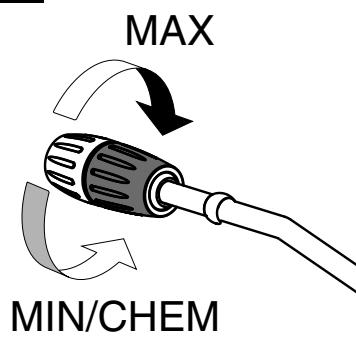
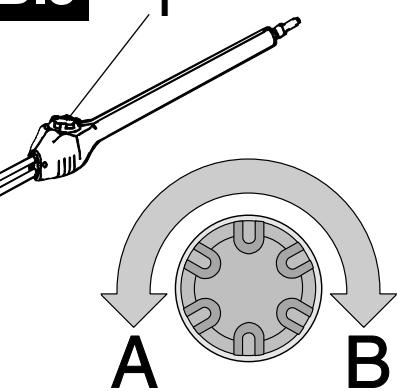
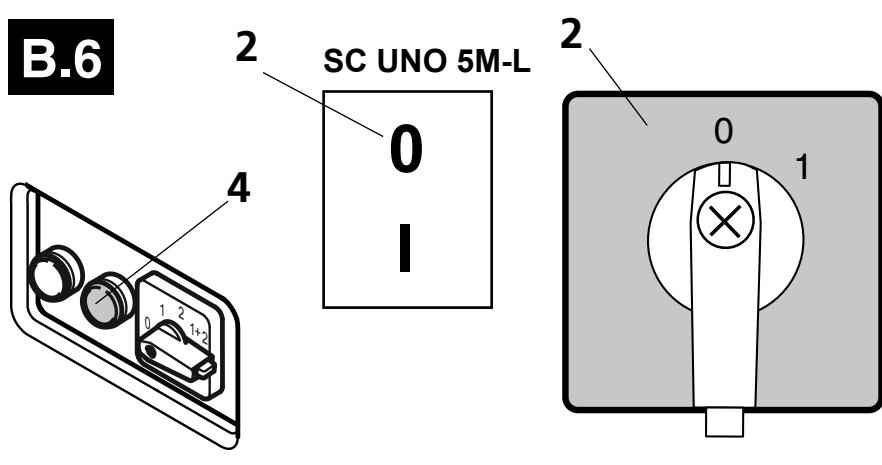
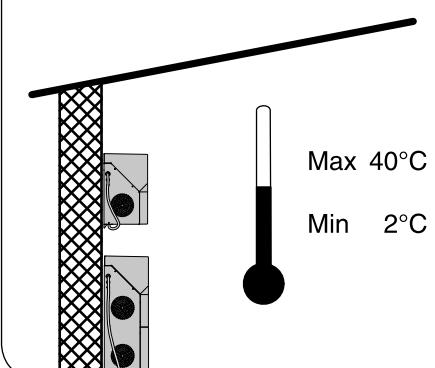


<b>(EN)</b>	Operating instructions .....	8
<b>(DE)</b>	Bedienungsanweisungen .....	13
<b>(FR)</b>	Instructions de fonctionnement .....	18
<b>(NL)</b>	Gebruiksaanwijzingen .....	23
<b>(IT)</b>	Istruzioni per l'uso .....	28
<b>(NO)</b>	Bruksanvisning .....	33
<b>(SV)</b>	Bruksanvisning .....	38
<b>(DA)</b>	Betjeningsvejledning .....	43
<b>(FI)</b>	Käyttöohje .....	48
<b>(ES)</b>	Instrucciones de funcionamiento .....	53
<b>(PT)</b>	Instruções de Funcionamento .....	58
<b>(EL)</b>	Οδηγίες λειτουργίες .....	63
<b>(TR)</b>	Kullanma Talimatları .....	69
<b>(SL)</b>	Navodila za delovanje .....	75
<b>(HR)</b>	Upute za uporabu .....	80
<b>(SK)</b>	Návod na obsluhu .....	85
<b>(CS)</b>	Návod k obsluze .....	90
<b>(PL)</b>	Instrukcje dotyczące obsługi .....	95
<b>(HU)</b>	Használati útmutató .....	101
<b>(RO)</b>	Instructiuni de utilizare .....	106
<b>(BG)</b>	Указания за експлоатация .....	111
<b>(RU)</b>	Руководство по эксплуатации .....	116
<b>(ET)</b>	Tööjuhised .....	122
<b>(LV)</b>	Norādījumi par ekspluatāciju .....	127
<b>(LT)</b>	Naudojimo instrukcija .....	132
<b>(JA)</b>	作手順 .....	137
<b>(ZH)</b>	操作说明 .....	142
<b>(KO)</b>	사용법 .....	146
<b>(TH)</b>	คำแนะนำการใช้งาน .....	151
<b>(MS)</b>	Arahan Operasi .....	156

**A****A.1****A.2**

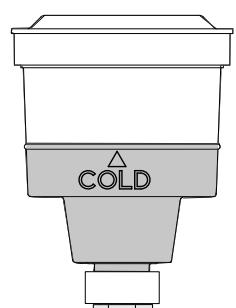
**A****A.3****A.4****SC UNO****A.4****SC DUO****A.7****SC UNO****SC UNO 5M-L****2****SC DUO**

**B****B.1.1****B.1.2****B.1.3****B.1.4****B.2****SC UNO****SC UNO 5M-L**

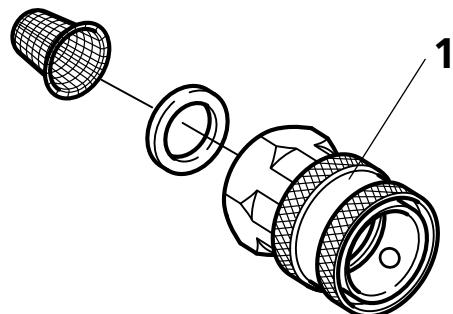
**B****B.2 SC DUO****B.3****B.4****B.5****B.6****B.7**

C

C.1



C.2



# Operating Instructions

This high pressure washer has been developed for professional use within:

- agriculture, light industry, transport, building and construction, service

Only use the high pressure washer for purposes described in this manual.

Regarding the following sections:

## A - Installation

## B - Operation

## C - Maintenance

please refer to pictures in front of the manual.

## A - Installation

### Before starting

### DO READ SAFETY INSTRUCTIONS BEFORE USE!

#### Operating elements:

1. Water connection with filter
2. Main switch
3. Starting button
4. Stop button
5. Pressure gauge
6. Connection of high pressure hose
7. Electric cable
8. Service plug
9. Hour counter
10. Oil container

### A.1 Temperature conditions

The machine should be installed in a frost-free room. This applies to pump as well as pipelines incl. of outlet points. Concerning outdoor outlet points it should be possible to close and empty that part of the line which is exposed to frost.

The maximum ambient temperature for the machine is 40°C.

### A.2 Condition of distance

In consideration of the cooling system of the machine and the accessibility of service, there must be free wall space on both sides of the machine. To the right 500 mm at a minimum and to the left 150 mm at a minimum.

#### SC UNO:

The recommended installation height for the machine is max. 1700 mm measured from the upper edge of the machine.

### A.3 Wall mounting

#### SC UNO:

Only mount the machine on a solid wall construction suited for the mounting of a machine. I.e. a concrete or brick wall.

Do not mount the machine on a wall where it will cause disturbances in neighbouring rooms (canteens, offices

etc.).

#### SC DUO:

Place the machine on a plane floor.

Machine feet have been mounted under the machine. These must be adjusted so that the machine stands stable. The feet may be bolted to the floor.

### A.4 Water connection

The water connection is made through a flexible rubber hose (minimum 12 m.) connected to the quick coupling on the water inlet(s) (1) of the machine.

The connection can be made to a water supply network or an internal water supply. A shut-off cock should be mounted on the water supply network in the immediate vicinity of the machine.

Max. water pressure: 10 bar

Min. water pressure: 1 bar

Max. water inlet temp.: See **Technical Specifications**.

If there is a risk of running sands or other impurities in the inlet water, a sand filter (50 micron) should be mounted beyond the internal filter of the machine (for further connection data see section **Technical Specifications**).

Clean the water inlet filter (1) once a month.

#### SC DUO:

Water inlet hoses must be connected to the same water tap.

### A.5 Mains power connection

Connect the machine to an approved safety switch.

Check voltage, fuse, and cables according to **Safety Instructions**.

Connection data conc. power consumption can be taken from the model tag of the machine.

### A.6 High pressure connection

**IMPORTANT:** When connecting to a pipeline always use a flexible hose connection from the outlet of the machine (pos. 6) - order no. 6300843. Contact your Nilfisk distributor for further information.

The outlet of the machine can be connected to a pipeline with fixed outlet points, or standard high pressure hoses can be connected directly to the outlet of the machine.

It is recommended to let a service technician authorized by Nilfisk prepare the pipeline.

### A.7 Venting

#### SC UNO:

Turn main switch (2) to position - 1 -. Open the outlet point. Push the green starting button (3).

**SC UNO 5M-L:** Switch main switch to position - I -. Open the outlet point.

Let the water run until all air has escaped from the pump (even water flow).

In the case of a recently installed system, or if the pipeline and the pump have been emptied in any other way, the system should be vented by starting the pump and then

let the water run at each outlet point of the pipeline at turns.

When connecting the high pressure hose directly to the machine, the system should be vented by starting the pump and activating the trigger of the spray handle without having attached the spray lance.

#### **SC DUO:**

In the case of a recently installed system, or if the pipeline and the pump have been emptied in any other way, the system should be vented as follows:

1. At first start pump no. 1 and let the water run from an outlet point of the pipeline.  
When connecting the high pressure hose directly to the machine, activate the trigger of the spray handle without having attached the spray lance.  
Let the water run until all air has escaped from the pump (even water flow).
2. Stop pump no. 1. Then start pump no. 2 and let the water run from an outlet point of the pipeline.  
When connecting the high pressure hose directly to the machine, activate the trigger of the spray handle without having attached the spray lance.  
Let the water run until all air has escaped from the pump (even water flow).
3. Vent the pipeline by starting one pump and then let the water run at each outlet point of the pipeline at turns until all air has escaped from the system.

## **B - Operation**

### **B.1 Connections**

#### **B.1.1 High pressure hose - directly on the machine**

The Nilfisk high pressure hose with imprinted max. working pressure and temperature should be attached to the outlet connection of the machine (6) by the quick coupling (a).

Max.extension hose: 50 m.

#### **Danger of scalding!**

Never dismount high pressure hoses at water temperatures above 50°C.

**IMPORTANT:** Prior to dismount-ing of the high pressure hose the machine should be stopped and the shut-off cock closed. Then activate the trigger of the spray handle to relieve the high pressure hose of pressure.

#### **B.1.2 High pressure hose - to outlet point**

In the case of a pipeline with fixed outlet points the high pressure hose with imprinted working pressure and temperature should be attached to the nipple of the high pressure cock (1) by the quick coupling (2). Upon attachment turn the handle of the high pressure cock (3) to open position.

#### **Danger of scalding!**

Never dismount high pressure hoses at water temperatures above 50°C.

**IMPORTANT:** Prior to dismounting of the high pressure hose or when changing to another outlet point the high pressure cock should be carefully closed. Then activate the trigger of the spray handle to relieve the high pressure hose of pressure.

#### **B.1.3 Spray handle - accessories**

1. Pull forward the quick coupling trigger (1) of the spray handle.
2. Insert the nipple of the spray lance (2) in the quick coupling and release the trigger.
3. Pull forward the spray lance or any other accessory to ensure correct mounting before starting the machine.

#### **NOTE!**

Clean nipple of any impurities each time the spray lance has been dismounted.

#### **B.1.4 Application of detergents (external)**

If you want to apply detergents or disinfectants these should be dosed to the water through an injector. In conjunction with the injector it may be advantageous to use a wall rack on which spray lances, 2 pcs. of 25 l containers as well as 10 m high pressure hose can be placed.

Below you will find various types of outlet points with injectors.

#### **1. Outlet point with detachable injector**

To be attached to the quick coupling of the high pressure cock.

To be used for dosing of low-foaming detergents or disinfectants.

Dosage 1-8%.

#### **2. Outlet point with detachable foam injector**

To be attached to the quick coupling of the high pressure cock.

To be used in conjunction with foam lance for application of high-foaming detergents or disinfectants.

Dosage 1-5%.

#### **3. Outlet point with cleaning trolley and foam injector**

To be attached to the quick coupling of the high pressure cock.

To be used in the same way as "Outlet point with detachable foam injector".

Makes it possible to place 4 spray lances, 2 pcs. of 25 l containers as well as 20 m high pressure hose.

## **B.2 Start**

The shut-off cock on the water inlet should be open.

#### **SC UNO:**

Turn the main switch (2) to position - 1 -. Press the green starting button (3).

**SC UNO 5M-L:** Switch main switch to position - I -).

Check on the pressure gauge (5) that a pressure is being

built up in the system. If a pressure is not being built up, vent the machine as described in section **A.7 Venting**.

#### **SC DUO:**

- Position **1** = Pump no. **1** in operation
- Position **2** = Pump no. **2** in operation
- Positions **1+2** = Pumps no. **1** and **2** in operation

Turn the main switch (2) to position **1**, **2** or **1+2**. Push the green starting button (3).

Check on the pressure gauge (5) that a pressure is being built up in the system. If a pressure is not being built up, vent the machine as described in section **A.7 Venting**.

### **B.3 Operation - automatic start/stop**

#### **Always hold the spray lance with both hands!**

The machine is automatically activated when the trigger (1) of the spray handle is activated.

When the trigger is released, the machine automatically stops after 20 seconds.

When the machine is not in use, the trigger should be locked with locking device (see arrow).

The spray lance features 2 nozzles, a high pressure nozzle and a low pressure nozzle.

### **B.4 FlexoPowerPlus and PowerSpeedVario - pressure regulation**

Turn the outermost part of the FlexoPowerPlus spray lance:

- High pressure = MAX
- Low pressure = MIN./CHEM.

### **B.5 Double spray lance, pressure regulation**

The spray lance features 2 nozzles - a high pressure nozzle and a low pressure nozzle.

#### **High pressure mode**

When the pressure reducing valve (1) is completely closed (turned clockwise - **B**), only the high pressure nozzle is used - **high pressure mode**.

#### **Low pressure mode**

When the reducing valve (1) is completely opened (turned counterclockwise - **A**), both spray lances are used - **low pressure mode** / possibility of dosing detergents.

The pressure may be regulated between these positions.

### **B.6 Stop**

#### **Danger of scalding!**

Never detach high pressure hoses at a water temperature above 50°C.

Never detach the high pressure hose while the machine is in operation.

1. To stop the machine, push the red stop button (4) and turn the main switch (2) to position - **0** -.
- SC UNO 5M-L** - switch main switch to position - **0** -.
2. Close the shut-off cock of the water inlet and activate the spray handle or open the high pressure cock to relieve the pipeline / high pressure hose of pressure.

### **B.7 Frost protection**

The machine should be installed in a frost-free room. This applies to pump as well as pipelines incl. of outlet points. Concerning outdoor outlet points it should be possible to empty that part of the line which is exposed to frost.

**IMPORTANT:** For safety reasons, hoses, spray lances and other accessories should always be thawed prior to use.

## **C - Maintenance**

It applies to the most exposed components that a minimum of maintenance ensures a prolonged and problem-free operation. Therefore it will be a good idea to make a habit of the following:

Prior to attaching the water hose and the high pressure hose, the quick couplings should be cleaned of dust and sand.

Prior to attaching the spray lance or other accessories to the spray handle, the machine should be started and the quick coupling cleaned of dust and sand.

### **C.1 Oil**

Check the oil level in the oil glass.

If the oil level gets too low, the machine will automatically shut down. The red button will flash (does not apply to SC UNO 5M-L).

In the case of repeated low oil level (oil waste) please contact a Nilfisk service technician.

#### **PROTECT THE ENVIRONMENT**

Waste oil and oil sludge must be removed as laid down in the instructions.

### **C.2 Water filter**

To avoid debris entering the high pressure pump, a water filter (fine) is fitted at the water inlet. Dependent on the purity of the water, this filter will have to be cleaned at regular intervals.

The filter can be removed when the quick coupling (pos. 1) has been unscrewed.

### **C.3 Cleaning of high pressure nozzle**

A clogging up in the nozzle causes a pump pressure which is too high, and a cleaning is immediately required.

1. Stop the cleaner and detach the spray lance.
2. Clean the nozzle.

**IMPORTANT:** ONLY use the cleaning tool when the spray lance is detached.

3. Flush the spray lance backwards with water.
4. If the pressure is still too high, repeat items 1-3.

### **C.4 Disposable waste**

This high pressure washer consists of parts which can affect the environment when thrown away. Parts that can pollute are as follows:

Oil, painted/zinc-coated parts, plastics/plastic-coated parts.

Therefore, it is important to follow the laws concerning the removal of polluting and dangerous materials when replacing spare parts or disposing of high pressure washer.

It is recommended that you bring the rejected parts to waste disposal areas or recycling plants that are approved for the destruction of these types of materials.

## Troubleshooting

You have chosen the best quality and therefore deserve the best service. To avoid unnecessary disappointments, you should check the following before contacting the nearest Nilfisk service organisation:

Symptom	Reason	Action
<b>Machine/pump will not start</b>	<ul style="list-style-type: none"> <li>&gt; A fuse has blown</li> <li>&gt; Power/plug not connected</li> <li>&gt; Thermal switches in motor activated (red lamp flashes)</li> <li>&gt; Thermal relay switched off (red lamp flashes)</li> <li>&gt; Oil shortage in pump</li> </ul>	<ul style="list-style-type: none"> <li>• Change the fuse.</li> <li>• Connect power/plug.</li> <li>• Let the motor cool. Start the machine and check that the working pressure is not too high and that the mains voltage corresponds to the specifications.</li> <li>• Refill with oil.</li> </ul>
<b>Fuses blow</b>	<ul style="list-style-type: none"> <li>&gt; Installation does not correspond to the ampere consumption of the machine</li> </ul>	<ul style="list-style-type: none"> <li>• Change to an installation corresponding to the ampere consumption of the machine at a minimum. Replace the fuse.</li> </ul>
<b>Working pressure too low</b>	<ul style="list-style-type: none"> <li>&gt; Nozzle worn</li> <li>&gt; Wrong spray lance</li> <li>&gt; Reduction valve of spray lance not adjusted to max. pressure.</li> <li>&gt; Nozzle partly clogged up</li> </ul>	<ul style="list-style-type: none"> <li>• Replace the nozzle.</li> <li>• Replace the spray lance (see section B4/B5).</li> <li>• Turn reduction valve completely counter-clockwise.</li> <li>• Clean the nozzle (see section C.3).</li> </ul>
<b>Working pressure not steady</b>	<ul style="list-style-type: none"> <li>&gt; Water temperature too high</li> <li>&gt; Insufficient water supply</li> <li>&gt; High pressure hoses too long</li> <li>&gt; Air in the system</li> <li>&gt; Water inlet filter clogged up</li> </ul>	<ul style="list-style-type: none"> <li>• Lower the temperature of the inlet water to max. temperature (see <b>Technical Specifications</b>).</li> <li>• Check water inlet filter. If that does not solve the problem, the water supply for the machine is insufficient. <b>NB!</b> Avoid long, thin hoses (min. 3/4").</li> <li>• Dismount high pressure extension hoses and retry. Extension hose max. 50 m. <b>NB!</b> Avoid long extension hoses with many couplings.</li> <li>• Vent the system (see section A.7).</li> <li>• Clean filter (see sect. D.2)</li> </ul>
<b>No working pressure</b>	<ul style="list-style-type: none"> <li>&gt; Nozzle clogged up</li> <li>&gt; No inlet water</li> <li>&gt; High pressure cock of outlet point open.</li> </ul>	<ul style="list-style-type: none"> <li>• Clean nozzle (see sect. D.3)</li> <li>• Check that the shut off cock of the water inlet is open. Check that the water supply meets the requirements (see section A.4)</li> <li>• Close all high pressure cocks not in use.</li> </ul>
<b>Machine starts and stops</b>	<ul style="list-style-type: none"> <li>&gt; Leaky hose/ pipeline/spray handle</li> </ul>	<ul style="list-style-type: none"> <li>• Repair leak.</li> </ul>
<b>Machine stops</b>	<ul style="list-style-type: none"> <li>&gt; Oil shortage in pump. Red lamp flashes</li> </ul>	<ul style="list-style-type: none"> <li>• Top up with oil.</li> </ul>
<b>Machine hour counter is not showing the hours. Machine function wrong - not correct starts and stops, red LED flashes without any failures</b>	<ul style="list-style-type: none"> <li>&gt; Mains power unstable</li> <li>&gt; Control system error</li> </ul>	<ul style="list-style-type: none"> <li>• Turn mains power off for min. 1 minute.</li> <li>• Press red button for 5 sec. to reset microprocessor.</li> </ul>

Should other malfunctions occur than those mentioned above, please contact your nearest Nilfisk service organisation.

## Warranty

Your Nilfisk product is guaranteed for 12 months from date of purchase (purchase receipt must be presented) on the following conditions:

- that defects are attributable to flaws or defects in materials or workmanship. (Usual wear and tear as well as misuse are not covered by the guarantee).
- that repairs have not been carried out or attempted by other than Nilfisk-trained service staff.
- that only original accessories have been applied.
- that the product has not been exposed to abuse such as knocks, bumps or frost.
- that the instructions in the manual have been carefully observed.

A warranty repair comprises the replacement of defective parts, but it does not cover freight and packaging charges. Besides we refer to national Sale of Goods Act.

Any **illegitimate** guarantee repair will be invoiced. (I.e. malfunctions due to **causes** mentioned in section "Troubleshooting" of the instruction manual).

## Maintenance plan

	Weekly	Every 500 operating hours	As required
Water filters			●
Grease quick coupling nipples for hose, gun and lance	●		
Check the pump oil quality	●		
Change the pump oil		©Nilfisk Service	

## Specifications

			SC UNO 5M-200/1050 L	SC UNO 5M-200/1050	SC UNO 6P-170/1610	SC UNO 7P-180/1200	SC UNO 7P-180/1200 EXPT
1			EU 欧盟	EU 欧盟	EU 欧盟	EU 欧盟	EXP
2		V/ph/Hz	400/3/50	400/3/50	400/3/50	400/3/50	440/3/60
3		A	16	16	16	16	16
4		kW кВт	6.1	6.1	8.8	6.7	6.7
5		P <sub>IEC</sub> bar (MPa) Бар (МПа) 巴 (兆帕)	200 (20)	200 (20)	170 (17)	180 (18)	180 (18)
6		Q <sub>IEC</sub> l/h л/час 升/小时	960	960	1500	1080	1080
7		P <sub>max</sub> bar (MPa) Бар (МПа) 巴 (兆帕)	250 (25)	250 (25)	250 (25)	250 (25)	250 (25)
8		Q <sub>max</sub> l/h	1050	1050	1600	1200	1200
9		t <sub>max</sub> °C (°F)	60 (140)	60 (140)	80 (176)	80 (176)	80 (176)
10		p <sub>max</sub> bar (MPa) Бар (МПа) 巴 (兆帕)			10 (1)		
11		p <sub>min</sub> bar (MPa) Бар (МПа) 巴 (兆帕)			1 (0.1)		
12		m 米			1		
13		mm 毫米			355x860x560		
14		kg кг	74	74	84	81	81
15		L <sub>PA</sub> (IEC 60335-2-69) dB(A)+/-2 дБ(А)+/-2	68	68	77	78	78
16		L <sub>WA</sub> (IEC 60335-2-69) dB(A)+/-2 дБ(А)+/-2	86	86	91	84	84
17		a <sub>h</sub> (ISO 5349 a <sub>h</sub> ) m/s <sup>2</sup> 米/秒 <sup>2</sup>	<1.5 +/- 1	<1.5 +/- 1	<1.5 +/- 1	<1.5 +/- 1	<1.5 +/- 1
18		N	46.3	46.3	67.8	54.8	54.8
19		L 升	0.73	0.73	0.95	1	1
20					Castrol ALPHASyn 150		

## Specifications

			SC DUO 6P-170/3220	SC DUO 7P-180/2400	SC DUO 7P-180/2400 EXPT	SC UNO 8P 180/2000
1			EU 欧盟	EU 欧盟	EXP	EU 欧盟
2		V/ph/Hz	400/3/50	400/3/50	440/3/60	400/3/50
3		A	32	32	32	25
4		kW кВт	18	16.4	16.4	11
5		P <sub>IEC</sub> bar (MPa) Бар (МПа) 巴 (兆帕)	170 (17)	180 (18)	180 (18)	180 (18)
6		Q <sub>IEC</sub> l/h л/час 升/小时	3000	2240	2240	1800
7		P <sub>max</sub> bar (MPa) Бар (МПа) 巴 (兆帕)	250 (25)	250 (25)	250 (25)	250 (25)
8		Q <sub>MAX</sub> l/h	3220	2400	2400	2000
9		t <sub>max</sub> °C (°F)	80 (176)	85 (185)		80 (176)
10		p <sub>max</sub> bar (MPa) Бар (МПа) 巴 (兆帕)			10 (1)	
11		p <sub>min</sub> bar (MPa) Бар (МПа) 巴 (兆帕)			1 (0.1)	
12		m 米		1	1	1
13		mm 毫米		355x860x1000		355x860x60
14		kg кг	180	160	160	100
15		L <sub>PA</sub> (IEC 60335-2-69)	dB(A)+/-2 дБ(A)+/-2	79	79	79
16		L <sub>WA</sub> (IEC 60335-2-69)	dB(A)+/-2 дБ(A)+/-2	93	93	93
17		a <sub>h</sub> (ISO 5349 a <sub>h</sub> )	m/s <sup>2</sup> 米/秒 <sup>2</sup>		<1.5 +/- 1	
18		N	135	115.7	107.5	-
19		L 升		1		0.95
20				Castrol ALPHASyn 150		

## Specifications

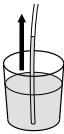
			SC UNO 8P- 160/2500	SC UNO 8P- 180/2000 EXPT	SC DUO 8P- 180/4000	SC DUO 8P- 160/5000
1			EU 欧盟	EXP	EU 欧盟	EU 欧盟
2		V/ph/Hz	400/3/50	440/3/60	400/3/50	400/3/50
3		A	25	25	50	50
4		kW кВт	11	12	22	22
5		P <sub>IEC</sub> bar (MPa) Бар (МПа) 巴 (兆帕)	160 (16)	180 (18)	180 (18)	150 (15)
6		Q <sub>IEC</sub> l/h л/час 升/小时	2400	1800	3600	4800
7		P <sub>max</sub> bar (MPa) Бар (МПа) 巴 (兆帕)	250 (25)	250 (25)	250 (25)	250 (25)
8		Q <sub>MAX</sub> l/h	2500	2000	4000	5000
9		t <sub>max</sub> °C (°F)			80 (176)	
10		p <sub>max</sub> bar (MPa) Бар (МПа) 巴 (兆帕)			10 (1)	
11		p <sub>min</sub> bar (MPa) Бар (МПа) 巴 (兆帕)			1 (0.1)	
12		m 米			1	
13		mm 毫米	355x860x60		355x860x1000	
14		kg кг	100	100	212	212
15		L <sub>PA</sub> (IEC 60335-2-69)	dB(A)+/-2 дБ(А)+/-2	77	77	80
16		L <sub>WA</sub> (IEC 60335-2-69)	dB(A)+/-2 дБ(А)+/-2	91	91	94
17		a <sub>h</sub> (ISO 5349 a <sub>h</sub> )	m/s <sup>2</sup> 米/秒 <sup>2</sup>		<1.5 +/- 1	
18		N	-	-	-	-
19		L 升	0.95		1	
20				Castrol ALPHASyn 150		

## Specifications

		SC DUO 8P 180/4000 EXPT	
1			EXP
2		V/ph/Hz	440/3/60
3		A	50
4		kW кВт	22
5	P <sub>IEC</sub>	bar (MPa) Бар (МПа) 巴 (兆帕)	180 (18)
6	Q <sub>IEC</sub>	l/h л/час 升/小时	3600
7	P <sub>max</sub>	bar (MPa) Бар (МПа) 巴 (兆帕)	250 (25)
8	Q <sub>MAX</sub>	l/h	4000
9	t <sub>max</sub>	°C (°F)	80 (176)
10	p <sub>max</sub>	bar (MPa) Бар (МПа) 巴 (兆帕)	10 (1)
11	p <sub>min</sub>	bar (MPa) Бар (МПа) 巴 (兆帕)	1 (0.1)
12		m 米	1
13		mm 毫米	355x860x1000
14		kg кг	212
15	L <sub>PA</sub> (IEC 60335-2-69)	dB(A)+/-2 дБ(А)+/-2	80
16	L <sub>WA</sub> (IEC 60335-2-69)	dB(A)+/-2 дБ(А)+/-2	94
17	a <sub>h</sub> (ISO 5349 a <sub>h</sub> )	m/s <sup>2</sup> 米/秒 <sup>2</sup>	<1.5 +/- 1
18		N	-
19		L 升	1
20			Castrol ALPHASyn 150

1			<b>EN:</b> Country variant. <b>DE:</b> Ländervarianten. <b>FR:</b> Selon le pays. <b>NL:</b> Nationale variant. <b>IT:</b> Variante per il Paese. <b>NO:</b> Variant i ulike land. <b>SV:</b> Landsvariant. <b>DA:</b> Landespecifik variant. <b>FI:</b> Maakohtainen vaihtelu. <b>ES:</b> Depende del país. <b>PT:</b> Variante do país. <b>EL:</b> Έκδοση χώρας. <b>TR:</b> Ülkedeki model. <b>SL:</b> Jezikovna različica. <b>HR:</b> Ovisno o zemlji. <b>SK:</b> Vrsta ulja. <b>CS:</b> Varianta země. <b>PL:</b> Wersja dla kraju. <b>HU:</b> Országfüggő modellváltozatok. <b>RO:</b> Varianta țării. <b>BG:</b> Вариант за страната. <b>RU:</b> Региональное исполнение. <b>ET:</b> Riigi variant. <b>LV:</b> Valsts versija. <b>LT:</b> Šalių skirtas variantas. <b>JA:</b> 国による相違。 <b>ZH:</b> 不同国家 <b>KO:</b> 국가별 모델. <b>TH:</b> แตกต่างกันในตามประเทศ <b>MS:</b> Variasi negara.
2		V/ph/Hz	<b>EN:</b> Possible voltage. <b>DE:</b> Mögliche Spannung. <b>FR:</b> Tension autorisée. <b>NL:</b> Mogelijke spanning. <b>IT:</b> Possibile voltaggio. <b>NO:</b> Mulig spennin. <b>SV:</b> Möjlig spänning. <b>DA:</b> Spænding. <b>FI:</b> Mahdollinen jännite, V/vaiheluku/taajuus. <b>ES:</b> Tensión admisible. <b>PT:</b> Tensão possível. <b>EL:</b> Πιθανή τάση, V/ph/Frez. <b>TR:</b> Olası voltaj, V/Faz/Frekans. <b>SL:</b> Morebitna napetost. <b>HR:</b> Mogući napon. <b>SK:</b> Možné napäťie. <b>CS:</b> Možné napětí. <b>PL:</b> Dopuszczalne napięcie, V/fazy/częst. <b>HU:</b> Tápfeszültség, V/fázis/frekv. <b>RO:</b> Tensiune posibilă, V/fază/Frecv. <b>BG:</b> Възможно напрежение. <b>RU:</b> Напряжение, В/ф./част. В/ф./Гц. <b>ET:</b> Võimalik pingi, V/faas/sagedus. <b>LV:</b> iespējamais spriegums. <b>LT:</b> Galima įtampa V / F / Frez. <b>JA:</b> 電圧。 <b>ZH:</b> 可能电压 (V/ph/Frez) <b>KO:</b> 허용 전압, 볼트/상/헤르츠. <b>TH:</b> แรงดันไฟฟ้าที่สามารถใช้ได้ <b>MS:</b> Kemungkinan voltan.
3		A	<b>EN:</b> Fuse. <b>DE:</b> Sicherung. <b>FR:</b> Fusible. <b>NL:</b> Zekering. <b>IT:</b> Fusibile. <b>NO:</b> Sikring. <b>SV:</b> Säkring. <b>DA:</b> Sikring. <b>FI:</b> Sulake. <b>ES:</b> Fusible. <b>PT:</b> Fusível. <b>EL:</b> Ασφάλεια. <b>TR:</b> Sigorta. <b>SL:</b> Varovalka <b>HR:</b> Osigurač <b>SK:</b> Poistka <b>CS:</b> Pojistka. <b>PL:</b> Bezpiecznik. <b>HU:</b> Biztosíték. <b>RO:</b> Siguranță. <b>BG:</b> Предпазител <b>RU:</b> Предохранитель. <b>ET:</b> Kaitse. <b>LV:</b> Drošinātājs. <b>LT:</b> Saugiklis. <b>JA:</b> ヒューズ <b>ZH:</b> 保险丝 <b>KO:</b> 퍼즈. <b>TH:</b> พีซ <b>MS:</b> Fius
4		kW кВт	<b>EN:</b> Power rating. <b>DE:</b> Nennleistung. <b>FR:</b> Puissance nominale. <b>NL:</b> Nominaal vermogen. <b>IT:</b> Corrente nominale. <b>NO:</b> Nominell effekt. <b>SV:</b> Märkeffekt. <b>DA:</b> Nominel effekt. <b>FI:</b> Tehontarve. <b>ES:</b> Potencia nominal. <b>PT:</b> Classificação de potência. <b>EL:</b> Ονομαστική ισχύς. <b>TR:</b> Elektrik değerleri. <b>SL:</b> Moč. <b>HR:</b> Oznaka napona. <b>SK:</b> Stanovenie výkonu. <b>CS:</b> Jmenovitý výkon. <b>PL:</b> Moc znamionowa. <b>HU:</b> Névleges teljesítmény. <b>RO:</b> Putere nominală. <b>BG:</b> Мощност. <b>RU:</b> Номинальная мощность кВт. <b>ET:</b> Vooluühik. <b>LV:</b> Nominālā jauda. <b>LT:</b> Galia. <b>JA:</b> 定格電力。 <b>ZH:</b> 额定功率 <b>KO:</b> 전원 등급. <b>TH:</b> อัตรากำลังไฟ <b>MS:</b> Penarafan kuasa.
5		bar (MPa) Бар (МПа) 巴 (兆帕)	<b>EN:</b> Working pressure. <b>DE:</b> Arbeitsdruck. <b>FR:</b> Pression de service. <b>NL:</b> Werkdruk. <b>IT:</b> Pressione di esercizio. <b>NO:</b> Arbeidstrykk. <b>SV:</b> Arbetstryck. <b>DA:</b> Arbejdstryk. <b>FI:</b> Työpaine. <b>ES:</b> Presión de trabajo. <b>PT:</b> Pressão de trabalho. <b>EL:</b> Πίεση λειτουργίας. <b>TR:</b> Çalışma basıncı. <b>SL:</b> Delovni tlak. <b>HR:</b> Radni tlak. <b>SK:</b> Pracovný tlak. <b>CS:</b> Pracovní tlak. <b>PL:</b> Ciśnienie robocze. <b>HU:</b> Üzemi nyomás. <b>RO:</b> Presiune de lucru. <b>BG:</b> Работно налягане. <b>RU:</b> Рабочее давление. <b>ET:</b> Töösurve. <b>LV:</b> Darba spiediens. <b>LT:</b> Darbinis slėgis. <b>JA:</b> 動作圧力。 <b>ZH:</b> 工作压力 <b>KO:</b> 작업 압력. <b>TH:</b> แรงดันขณะใช้งาน <b>MS:</b> Tekanan kerja
6		l/h л/час 升/小时	<b>EN:</b> Water flow. <b>DE:</b> Wasserdurchsatz. <b>FR:</b> Débit d'eau. <b>NL:</b> Waterdoorstroming. <b>IT:</b> Flusso dell'acqua. <b>NO:</b> Vanntilførsel. <b>SV:</b> Vattenflöde. <b>DA:</b> Vandmængde. <b>FI:</b> Vedenvirtaus. <b>ES:</b> Flujo de agua. <b>PT:</b> Fluxo de água. <b>EL:</b> Πού νερού. <b>TR:</b> Su akışı. <b>SL:</b> Pretok vode. <b>HR:</b> Regulacija protoka vode. <b>SK:</b> Prietok vody. <b>CS:</b> Průtok vody. <b>PL:</b> Przepływ wody. <b>HU:</b> Vízátélyás. <b>RO:</b> Debit apă. <b>BG:</b> Воден поток. <b>RU:</b> Расход воды. <b>ET:</b> Veevool. <b>LV:</b> Ūdens plūšma. <b>LT:</b> Vandens srautas. <b>JA:</b> 流水 <b>ZH:</b> 水流量 <b>KO:</b> 급수량. <b>TH:</b> การไหลของน้ำ <b>MS:</b> Aliran air.
7		bar (MPa) Бар (МПа) 巴 (兆帕)	<b>EN:</b> Max. water pressure. <b>DE:</b> Max Wasserdruck. <b>FR:</b> Pression d'eau maximale. <b>NL:</b> Max. waterdruk. <b>IT:</b> Max. pressione dell'acqua. <b>NO:</b> Maks. vanntrykk. <b>SV:</b> Max vattentryck. <b>DA:</b> Max. vandtryk. <b>FI:</b> Suurin vedenpaine. <b>ES:</b> Presión máxima de entrada del agua. <b>PT:</b> Pressão máxima de água. <b>EL:</b> Μέγ. πίεση νερού. <b>TR:</b> Maks. su basıncı. <b>SL:</b> Najvi. vodni tlak. <b>HR:</b> Maksimalni tlak vode. <b>SK:</b> Maximálny tlak vody. <b>CS:</b> Max. tlak vody. <b>PL:</b> Maks. ciśnienie wody. <b>HU:</b> Max. víznyomás. <b>RO:</b> Presiune max. apă. <b>BG:</b> Макс. налягане на водата. <b>RU:</b> Макс. давление воды. <b>ET:</b> Max veesurve. <b>LV:</b> Maks. ūdens spiediens. <b>LT:</b> Maks. vandens slėgis. <b>JA:</b> 最高水压 <b>ZH:</b> 最大水压. <b>KO:</b> 최대 수압. <b>TH:</b> ความดันน้ำสูงสุด <b>MS:</b> Tekanan air maksimum.

8		I/h	<b>EN:</b> Water flow <b>DE:</b> Wasserdurchsatz. <b>FR:</b> Débit d'eau. <b>NL:</b> Waterdoorstroming. <b>IT:</b> Flusso dell'acqua. <b>NO:</b> Vanntilførsel. <b>SV:</b> Vattenflöde. <b>DA:</b> Vandmængde. <b>FI:</b> Vedevirtaus. <b>ES:</b> Flujo de agua. <b>PT:</b> Fluxo de água. <b>EL:</b> Πού νερού. <b>TR:</b> Su aksiği. <b>SL:</b> Pretok vode. <b>HR:</b> Protok vode. <b>SK:</b> Prietok vody. <b>CS:</b> Průtok vody. <b>PL:</b> Przepływ wody. <b>HU:</b> Vízátfolyás. <b>RO:</b> Debit apă. <b>BG:</b> Воден поток. <b>RU:</b> Расход воды. <b>ET:</b> Veevool. <b>LV:</b> Ūdens plūšma. <b>LT:</b> Vandens srautas. <b>JA:</b> 流水。 <b>ZH:</b> 水流量 <b>KO:</b> 급수량. <b>TH:</b> การไหลของน้ำ <b>MS:</b> Aliran air.
9		°C (°F)	<b>EN:</b> Max water inlet temperature, Intake-Pressure operation. <b>DE:</b> Max Wassereinlasstemperatur - Druckbetrieb. <b>FR:</b> Température max. de l'entrée d'eau en mode admission/pression. <b>NL:</b> Max. Waterinlaattemperatuur Inlaat-Tijdens. Bedrijf. <b>IT:</b> Temperatura max. alimentazione acqua Funzionamento a ingressopressione. <b>NO:</b> Maks. temperatur vanninntak, Inntakstrykk drift. <b>SV:</b> Max ingående vattentemperatur inlopps-tryckdrift. <b>DA:</b> Maks. vandtilgangstemperatur, tilgangstrykdrift. <b>FI:</b> Tuloveden suurin lämpötila, käytettäessä painepesurina. <b>ES:</b> Temperatura y presión máxima de entrada del agua. <b>PT:</b> Temperatura máxima de entrada de água, Funcionamento da pressão de entrada. <b>EL:</b> Μεγ. θερμοκρασία εισόδου νερού-λειτουργίας πίεσης. <b>TR:</b> Maks. su girişi sıcaklığı Emme-Basınçlı çalışma. <b>SL:</b> Najv. vstopna temperatura vode, vstopni tlak pri delovanju. <b>HR:</b> Maks. temperatura ulazne vode, tlak pri usisavanju. <b>SK:</b> Max. vstupná teplota vody, Prevádzka v nasávacom režime pod tlakom. <b>CS:</b> Max. teplota vody na vstupe, provozní sací tlak. <b>PL:</b> Maks. temperatura na doplywie wody z instalacji wodociągowej. <b>HU:</b> Max. bemenő vízhőmérséklet Szívónymásos üzem. <b>RO:</b> Temperatura max. de admisie apă în cazul alimentării de la robinet. <b>BG:</b> Макс. температура на входящата вода – работа в режим на засмукване. <b>RU:</b> Макс. температура воды на входе (всасывание/подача под давлением). <b>ET:</b> Max vee sisselasketemperatuur Sissevõturöhk töö ajal. <b>LV:</b> Maks. ūdens iepļudes temperatūra iepļudes-spiedienā darbībā. <b>LT:</b> Didžiausia vandens paémimo temperatūra, veikimas esant jėjimo slėgiui. <b>JA:</b> 最高流入水温度、吸氣壓力動作。 <b>ZH:</b> 进水压力操作时的最高进水水温 <b>KO:</b> 최대 급수 온도 주입/압력 작동. <b>TH:</b> อุณหภูมินำเข้าสูงสุด ความดันใน การใช้งานบริเวณทางเข้า <b>MS:</b> Suhu maksimum air masuk, Kemasukan-Operasi tekanan.
10		bar (MPa) Бар (МПа) 巴 (兆帕)	<b>EN:</b> Max. water inlet pressure. <b>DE:</b> Max. Wassereinlassdruck. <b>FR:</b> d'eau en mode admission/pression. <b>NL:</b> Max. waterinlaatdruk. <b>IT:</b> Pressione max. alimentazione acqua. <b>NO:</b> Maks. trykk vanninntak. <b>SV:</b> Max tryck för vatteninlopp. <b>DA:</b> Maks. Vandtilgangstryk. <b>FI:</b> Tuloveden suurin paine. <b>ES:</b> Presión máxima de entrada del agua. <b>PT:</b> Pressão máxima de entrada de água. <b>EL:</b> Μεγ. πίεση εισόδου νερού. <b>TR:</b> Maks. su girişi basıncı. <b>SL:</b> Najv. tlak dovoda vode. <b>HR:</b> Maks. tlak ulazne vode. <b>SK:</b> Max. vstupný tlak vody. <b>CS:</b> Max. tlak vody na vstupe. <b>PL:</b> Maks. ciśnienie na doplywie wody. <b>HU:</b> Max. bemenő nyomás. <b>RO:</b> Presiunea max. de alimentare cu apă. <b>BG:</b> Макс. налягане на входяща вода. <b>RU:</b> Макс. давление воды на входе. <b>ET:</b> Maks vee sissevoolusurve. <b>LV:</b> Maks. ūdens spiediens. <b>LT:</b> Didžiausias vandens paémimo slėgis. <b>JA:</b> 最高流入水压。 <b>ZH:</b> 最大进水压力 <b>KO:</b> 최고 급수 압력. <b>TH:</b> ความดันนำเข้าสูงสุด <b>MS:</b> Tekanan maksimum air masuk.
11		bar (MPa) Бар (МПа) 巴 (兆帕)	<b>EN:</b> Min. water inlet pressure. <b>DE:</b> Min. Wassereinlassdruck. <b>FR:</b> d'eau en mode admission/pression Min. <b>NL:</b> Min. waterinlaatdruk. <b>IT:</b> Pressione min. alimentazione acqua. <b>NO:</b> Min. trykk vanninntak. <b>SV:</b> Min tryck för vatteninlopp. <b>DA:</b> Min. Vandtilgangstryk. <b>FI:</b> Tuloveden suurin paine. <b>ES:</b> Presión mínima de entrada del agua. <b>PT:</b> Pressão min. de entrada de água. <b>EL:</b> Ελάχιστη πίεση εισόδου νερού. <b>TR:</b> Min. su girişi basıncı. <b>SL:</b> Minimalni tlak dovoda vode. <b>HR:</b> Min. tlak ulazne vode. <b>SK:</b> Min. vstupný tlak vody. <b>CS:</b> Min. tlak vody na vstupe. <b>PL:</b> Min. ciśnienie na doplywie wody. <b>HU:</b> Min. bemenő nyomás. <b>RO:</b> Presiunea min. de alimentare cu apă. <b>BG:</b> Макс. налягане на входяща вода. <b>RU:</b> Минимально давление воды на входе. <b>ET:</b> Min vee sissevoolusurve. <b>LV:</b> Min ūdens spiediens. <b>LT:</b> Minimalus vandens paémimo slėgis <b>JA:</b> 最低流入水压。 <b>ZH:</b> 最低进水压力。 <b>KO:</b> 최저 유입 수압. <b>TH:</b> แรงดันนำเข้าของน้ำต่ำสุด <b>MS:</b> Tekanan minimum air masuk.

12		m 米	<b>EN:</b> Max dry suction height. <b>DE:</b> Max. Trockensaughöhe. <b>FR:</b> Hauteur d'aspiration à sec max. <b>NL:</b> Max. droge aanzuighoogte. <b>IT:</b> Altezza massima di aspirazione secco. <b>NO:</b> Maks. sugehøyde tørr. <b>SV:</b> Max torrsugningshöjd. <b>DA:</b> Maks. sugehøjde, tør. <b>FI:</b> Suurin kuivaimukorkeus. <b>ES:</b> Altura máxima de succión en seco. <b>PT:</b> Altura de aspiração a seco máx. <b>EL:</b> Μέγ. ύψος αναρρόφησης. <b>TR:</b> Maks. Kuru emme yüksekliği. <b>SL:</b> Najv. višina suhega vsesavanja. <b>HR:</b> Maks. visina pri suhom usisavanju. <b>SK:</b> Max. suchá nasávacia výška. <b>CS:</b> Max. sací výška nasucho. <b>PL:</b> Maks. wysokość ssania na sucho. <b>HU:</b> Max. száraz szívómagasság. <b>RO:</b> Înălțime max. de aspirare în cazul alimentării cu apă dintr-un recipient. <b>BG:</b> Макс. височина на сухо засмукване. <b>RU:</b> Макс. высота всасывания. <b>ET:</b> Max kuivimu kõrgus. <b>LV:</b> Maks. sausās sūkšanas augstums. <b>LT:</b> Maksimalus sausas įsiurbimo aukštis. <b>JA:</b> 最大乾燥吸込高さ。 <b>ZH:</b> 最大干吸高度 米 <b>KO:</b> 최대 건조 흡입 높이。 <b>TH:</b> ความสูงของท่อดูดแห้งสูงสุด <b>MS:</b> Ketinggian maksimum sedutan kering.
13		mm 毫米	<b>EN:</b> Dimensions LxWxH. <b>DE:</b> Masse LxBxH. <b>FR:</b> Dimensions l x p x h. <b>NL:</b> Afmetingen LxBxH. <b>IT:</b> Dimensioni, lun. x larg. x alt. <b>NO:</b> Mål LxBxH. <b>SV:</b> Dimensioner LxBxH <b>DA:</b> Mål LxBxH. <b>FI:</b> Mitat, PxLxK. <b>ES:</b> Dimensiones l x a x al. <b>PT:</b> Dimensões, C x L x A. <b>EL:</b> Διαστάσεις, M x Π x Y. <b>TR:</b> Boyutlar, u x g x y. <b>SL:</b> Mere D x Š x V. <b>HR:</b> Dimenzijs DxŠxV. <b>SK:</b> Rozmery D x Š x V. <b>CS:</b> Rozměry d x š x v. <b>PL:</b> Wymiary dług. x szer. x wys. <b>HU:</b> Méretek H x Sz x M. <b>RO:</b> Dimensiuni. L x l x l. <b>BG:</b> Размери Д x Ш x В. <b>RU:</b> Размеры, Дл. x Шир. x Выс. <b>ET:</b> Möötmed p x l x k. <b>LV:</b> Izmēri G x P x A. <b>LT:</b> Matmenys (i x p x a). <b>JA:</b> 外形寸法長さx幅x高さ。 <b>ZH:</b> 尺寸 (长 x 宽 x 高) 毫米 <b>KO:</b> 크기(l x w x h). <b>TH:</b> ขนาด ยาว x กว้าง x สูง <b>MS:</b> Dimensi LxWxH.
14		kg kg	<b>EN:</b> Weight. <b>DE:</b> Gewicht. <b>FR:</b> Poids du nettoyeur. <b>NL:</b> Gewicht van de hogedrukreiniger. <b>IT:</b> Peso dell'idropulitrice. <b>NO:</b> Vekt høytrykksvasker. <b>SV:</b> Maskinens vikt. <b>DA:</b> Vægt. <b>FI:</b> Pelkän painepesurin paino. <b>ES:</b> Peso del limpiador. <b>PT:</b> Peso da máquina de limpeza. <b>EL:</b> Βάρος μηχανήματος καθαρισμού. <b>TR:</b> Temizlik makinelerin yüksekliği. <b>SL:</b> Masa. <b>HR:</b> Težina. <b>SK:</b> Hmotnosť. <b>CS:</b> Hmotnost čisticího stroje. <b>PL:</b> Ciężar myjki. <b>HU:</b> Tisztítógép tömege. <b>RO:</b> Greutatea aparatului. <b>BG:</b> Тегло. <b>RU:</b> Вес моющей машины. <b>ET:</b> Pesuri kaal. <b>LV:</b> Tīrītāja svārs. <b>LT:</b> Valymo īrenginio svoris. <b>JA:</b> 重量。 <b>ZH:</b> 清洗机重量 <b>KO:</b> 세척기 무게。 <b>TH:</b> น้ำหนัก <b>MS:</b> Berat.
15	 (IEC 60335-2-69)	dB(A) +/-2 дБ(А) +/-2	<b>EN:</b> Sound pressure level $L_{PA}$ . <b>DE:</b> Schalldruckpegel <b>FR:</b> Niveau de pression acoustique <b>NL:</b> Geluidsdruckniveau <b>IT:</b> Livello pressione sonora <b>NO:</b> Lydtrykknivå <b>SV:</b> Ljudtrycksnivå <b>DA:</b> Lydtryksniveau <b>FI:</b> Äänenvahingon tasoa <b>ES:</b> Nivel de presión sonora <b>PT:</b> Nível de pressão acústica <b>EL:</b> Επίπεδο πίεσης ήχου <b>TR:</b> Göre ses basinci seviyesi <b>SL:</b> Raven zvočnega tlaka. <b>HR:</b> Razina zvučnog tlaka. <b>SK:</b> Hladina zvukového tlaku. <b>CS:</b> Hladina akustického tlaku <b>PL:</b> Poziom ciśnienia akustycznego <b>HU:</b> Hangnyomásszint <b>RO:</b> Nivel de presiune acustică <b>BG:</b> Ниво на звуково налягане <b>RU:</b> Уровень шума <b>ET:</b> Helisurve tase <b>LV:</b> Akustiskā spiediena līmenis <b>LT:</b> Garso slēgio līgvis <b>JA:</b> 音圧レベル <b>ZH:</b> 声压级 <b>KO:</b> 음압 레벨 <b>TH:</b> ระดับความดันเสียง <b>MS:</b> Tahap tekanan bunyi
16	 (IEC 60335-2-69)	dB(A) +/-2 дБ(А) +/-2	<b>EN:</b> Sound power level $L_{WA}$ . <b>DE:</b> Schalleistungspegel <b>FR:</b> Niveau de puissance acoustique <b>NL:</b> Geluidsvermogen niveau <b>IT:</b> Livello potenza sonora <b>NO:</b> Lydfeffektnivå <b>SV:</b> Ljudeffektnivå <b>DA:</b> Lydfeffektniveau <b>FI:</b> Äänen tehotaisto <b>ES:</b> Potencia acústica <b>PT:</b> Nível de potência acústica <b>EL:</b> Επίπεδο ισχύος ήχου <b>TR:</b> Göre ses basinci seviyesi <b>SL:</b> Raven moči zvoka. <b>HR:</b> Razina jakosti. <b>SK:</b> Hladina zvukového výkonu. <b>CS:</b> Hladina akustického výkonu <b>PL:</b> Poziom mocy akustycznej <b>HU:</b> Hangteljesítmény szint <b>RO:</b> Nivelul de putere acustică <b>BG:</b> Ниво на звукова мощност <b>RU:</b> Уровень звуковой мощности <b>ET:</b> Helivoimsuse tase <b>LV:</b> Akustiskā jaudas līmenis <b>LT:</b> Garso galios līgvis <b>JA:</b> 音響パワーレベル <b>ZH:</b> 声功率级 <b>KO:</b> 소음 레벨 <b>TH:</b> ระดับกำลังเสียง <b>MS:</b> Tahap kuasa bunyi
17	 (ISO 5349 a_h)	m/s² 米/秒²	<b>EN:</b> Vibration. <b>DE:</b> Vibrationen <b>FR:</b> Vibration <b>NL:</b> Vibratie <b>IT:</b> Vibrazioni <b>NO:</b> Vibrasjoner <b>SV:</b> Vibration <b>DA:</b> Vibration <b>FI:</b> Tärinäärvot <b>ES:</b> Vibración <b>PT:</b> Vibrações <b>EL:</b> Δόνηση <b>TR:</b> Titreşimi <b>SL:</b> Vibracije. <b>HR:</b> Vibracije. <b>SK:</b> Vibrácie. <b>CS:</b> Vibrace <b>PL:</b> Drgania <b>HU:</b> Vibráció <b>RO:</b> Vibrări <b>BG:</b> Вибрации. <b>RU:</b> Вибрация <b>ET:</b> vibratsioon <b>LV:</b> vibrācija <b>LT:</b> Vibracijos <b>JA:</b> 振動。 <b>ZH:</b> 振动 <b>KO:</b> 진동 <b>TH:</b> แรงสั่นสะเทือน <b>MS:</b> Getaran.

18		N	<b>EN:</b> Recoil forces, lance. <b>DE:</b> Rückstoßkraft, Sprührohr <b>FR:</b> Forces de recul, lance <b>NL:</b> Terugslagkracht, lans <b>IT:</b> Forze di rinculo, lancia <b>NO:</b> Rekylkraft, lanse <b>SV:</b> Rekylkraft, spolrör <b>DA:</b> Rekylkraft, dyserør <b>FI:</b> Rekyylivoimat, suutin <b>ES:</b> Fuerzas de retroceso, lanza <b>PT:</b> Forças de retrocesso, lança <b>EL:</b> Δυνάμεις οπισθοδρόμησης, διάταξη ψεκασμού χη. <b>TR:</b> Sarmal kuvvetler, boru <b>SL:</b> Povratne sile, šoba. <b>HR:</b> Trzajne sile, mlaznica. <b>SK:</b> Spätný odraz, štandardná striekacia rúra. <b>CS:</b> Síly zpětného rázu, násadec <b>PL:</b> Siły odrzutu, lanca <b>HU:</b> Visszaható erők, szórócső <b>RO:</b> Forțe de recul, tija <b>BG:</b> Сили на откат, накрайник. <b>RU:</b> Сила отдачи (распылитель). <b>ET:</b> Tagasilöögijoud, otsik <b>LV:</b> Atsītiena spēks, smidzinātājs <b>LT:</b> Atatrankos jēga, antgalis <b>JA:</b> 反跳力、, ランス。 <b>ZH:</b> 反冲力 (喷杆) <b>KO:</b> 반동력, 랜스 <b>TH:</b> แรงสะท้อนด้วยหลัง, ปลายหอ <b>MS:</b> Kuasa sentakan, lans.
19		L 升	<b>EN:</b> Oil quantity. <b>DE:</b> Ölmenge. <b>FR:</b> Quantité d'huile. <b>NL:</b> Hoeveelheid olie. <b>IT:</b> Quantità olio. <b>NO:</b> Oljemengde. <b>SV:</b> Oljemängd. <b>DA:</b> Oliemængde. <b>FI:</b> Öljymäärä. <b>ES:</b> Cantidad de aceite. <b>PT:</b> Quantidade de óleo. <b>EL:</b> Ποσότητα λαδιού. <b>TR:</b> Yağ miktarı. <b>SL:</b> Količina olja. <b>HR:</b> Količina ulja. <b>SK:</b> Množstvo oleja. <b>CS:</b> Množství oleje. <b>PL:</b> Objętość oleju. <b>HU:</b> Olajmennyiség. <b>RO:</b> Cantitate de ulei. <b>BG:</b> Количество на маслoto. <b>RU:</b> Количество масла. <b>ET:</b> Õli kogus. <b>LV:</b> Ellas daudzums. <b>LT:</b> Tepalo kiekis. <b>JA:</b> オイル量。 <b>ZH:</b> 油量升 <b>KO:</b> 오일량. <b>TH:</b> ปริมาณน้ำมัน <b>MS:</b> Kuantiti minyak.
20			<b>EN:</b> Oil type. <b>DE:</b> Öltyp. <b>FR:</b> Type d'huile. <b>NL:</b> Olietype. <b>IT:</b> Tipo olio. <b>NO:</b> Oljetype. <b>SV:</b> Typ av olja. <b>DA:</b> Olietype. <b>FI:</b> Öljyn tyyppi. <b>ES:</b> Tipo de aceite. <b>PT:</b> Tipo de óleo. <b>EL:</b> Τύπος λαδιού. <b>TR:</b> Yağ tipi. <b>SL:</b> Vrsta olja. <b>HR:</b> Vrsta ulja. <b>SK:</b> Typ oleja. <b>CS:</b> Typ oleje. <b>PL:</b> Typ oleju. <b>HU:</b> Olaj típusa. <b>RO:</b> Tip de ulei. <b>BG:</b> Тип на маслoto. <b>RU:</b> Тип масла. <b>ET:</b> Õli tüüp. <b>LV:</b> Ellas tips. <b>LT:</b> Tepalo tipas. <b>JA:</b> オイルの種類。 <b>ZH:</b> 油型 <b>KO:</b> 오일 유형. <b>TH:</b> ประเภทน้ำมัน <b>MS:</b> Jenis minyak.
			<b>EN:</b> Specifications and details are subject to change without prior notice. <b>DE:</b> Technische Daten und Details des Geräts können sich ohne vorherige Ankündigung ändern. <b>FR:</b> Ces spécifications et détails sont susceptibles d'être modifiés sans préavis. <b>NL:</b> Specificaties en details kunnen zonder voorafgaande waarschuwing worden gewijzigd. <b>IT:</b> Specifiche e dettagli sono soggetti a modifiche senza preavviso. <b>NO:</b> Specifikasjonene og detaljene er gjenstand for endringer uten forutgående varsel. <b>SV:</b> Specifikationer och information kan ändras utan föregående meddelande. <b>DA:</b> Ret til ændringer i konstruktion og specifikationer forbeholdes. <b>FI:</b> Rakenteeseen ja teknisiin tietoihin voidaan tehdä muutoksia ilmoittamatta niistä ennalta. <b>ES:</b> Las especificaciones y los datos están sujetos a cambios sin previo aviso. <b>PT:</b> As especificações e os detalhes estão sujeitos a alterações sem aviso prévio. <b>EL:</b> Τα τεχνικά χαρακτηριστικά και οι λεπτομέρειες υπόκεινται σε αλλαγές χωρίς προηγούμενη ειδοποίηση. <b>TR:</b> Özelliğler ve ayrıntılar, önceden haber verilmeden değiştirilebilir. <b>SL:</b> Tehnični podatki in podrobnosti se lahko spremenijo brez predhodnega obvestila. <b>HR:</b> Specifikacije i detalji mogu se mijenjati bez prethodne najave. <b>SK:</b> Špecifikácie a podrobnosti sa môžu meniť bez predchádzajúceho upozornenia. <b>CS:</b> Technické údaje a detaily mohou být změněny i bez předchozího upozornění. <b>PL:</b> Specyfikacje i parametry mogą zostać zmienione bez uprzedzenia. <b>HU:</b> A műszaki adatok és részletek előzetes értesítés nélkül megváltozhatnak. <b>RO:</b> Specificațiile și detaliile pot fi modificate fără înștiințare prealabilă. <b>BG:</b> Спецификациите и детайлите подлежат на промяна без предварително уведомление. <b>RU:</b> Технические характеристики и данные могут изменяться без предварительного извещения. <b>ET:</b> Tehnilisi kirjeldusi ja üksikasju võidakse muuta eelneva ettteteatamiseta. <b>LV:</b> Specifikācijas un detaļas var tikt mainītas bez iepriekšēja paziņojuma. <b>LT:</b> Konstrukcija ir specifikacijos gali keistis be išankstinio įspėjimo. <b>JA:</b> 仕様および情報は事前通知無しに変更する場合があります。 <b>ZH:</b> 规格和详情如有变更，恕不另行通知。 <b>KO:</b> 사양 및 내용은 예고 없이 변경될 수 있습니다. <b>TH:</b> ข้อกำหนดและรายละเอียดสามารถเปลี่ยนแปลงได้โดยไม่ต้องแจ้งให้ทราบล่วงหน้า <b>MS:</b> Spesifikasi dan butiran adalah tertakluk kepada perubahan tanpa notis terlebih dahulu.



## **HEAD QUARTER**

### **DENMARK**

Nilfisk A/S  
Kornmarksvej 1  
DK-2605 Broendby  
Tel.: (+45) 4323 8100  
[www.nilfisk.com](http://www.nilfisk.com)

## **SALES COMPANIES**

**ARGENTINA**  
Nilfisk Argentina  
Herrera 1855 Piso 4° B Ofic 405  
Ciudad de Buenos Aires  
Tel.: (+54) 11 6091 1576  
[www.nilfisk.com.ar](http://www.nilfisk.com.ar)

**AUSTRALIA**  
Nilfisk Pty Ltd  
Unit 1/13 Bessemer Street  
Blacktown NSW 2148  
Tel.: (+61) 2 98348100  
[www.nilfisk.com.au](http://www.nilfisk.com.au)

**AUSTRIA**  
Nilfisk GmbH  
Metzgerstrasse 68  
5101 Bergheim bei Salzburg  
Tel.: (+43) 662 456 400 90  
[www.nilfisk.at](http://www.nilfisk.at)

**BELGIUM**  
Nilfisk n.v.s.a.  
Riverside Business Park  
Boulevard Internationaleaan 55  
Bâtiment C3/C4 Gebouw  
Bruxelles 1070  
Tel.: (+32) 24 67 60 50  
[www.nilfisk.be](http://www.nilfisk.be)

**BRAZIL**  
Nilfisk do Brasil  
Av. Eng. Luis Carlos Berrini, 550  
40 Andar, Sala 03  
SP - 04571-000 Sao Paulo  
Tel.: (+11) 3959-0300 / 3945-4744  
[www.nilfisk.com.br](http://www.nilfisk.com.br)

**CANADA**  
Nilfisk Canada Company  
240 Superior Boulevard  
Mississauga, Ontario L5T 2L2  
Tel.: (+1) 800-668-8400  
[www.nilfisk.ca](http://www.nilfisk.ca)

**CHILE**  
Nilfisk S.A. (Comercial KCS Ltda)  
Salar de Llamara 822  
8320000 Santiago  
Tel.: (+56) 2684 5000  
[www.nilfisk.cl](http://www.nilfisk.cl)

**CHINA**  
Nilfisk  
4189 Yindu Road  
Xinzhuan Industrial Park  
201108 Shanghai  
Tel.: (+86) 21 3323 2000  
[www.nilfisk.cn](http://www.nilfisk.cn)

**CZECH REPUBLIC**  
Nilfisk s.r.o.  
VGP Park Horní Počernice  
Do Čertous 1/2658  
193 00 Praha 9  
Tel.: (+420) 244 090 912  
[www.nilfisk.cz](http://www.nilfisk.cz)

**DENMARK**  
Nilfisk Danmark A/S  
Industrievej 1  
Hadsund, DK-9560  
Tel.: 72 18 21 20  
[www.nilfisk.dk](http://www.nilfisk.dk)

**FINLAND**  
Nilfisk Oy Ab  
Koskelontie 23 E  
02920 Espoo  
Tel.: (+358) 207 890 600  
[www.nilfisk.fi](http://www.nilfisk.fi)

## **FRANCE**

Nilfisk SAS  
26 Avenue de la Baltique  
Villebon sur Yvette  
91978 Courtaboeuf Cedex  
Tel.: (+33) 169 59 87 00  
[www.nilfisk.fr](http://www.nilfisk.fr)

## **GERMANY**

Nilfisk GmbH  
Guido-Oberdorfer-Straße 2-10  
89287 Bellenberg  
Tel.: (+49) (0)7306/72-444  
[www.nilfisk.de](http://www.nilfisk.de)

## **GREECE**

Nilfisk A.E.  
Αναπταύσεως 29  
Κορωπί Τ.Κ. 194 00  
Tel.: (30) 210 9119 600  
[www.nilfisk.gr](http://www.nilfisk.gr)

## **HOLLAND**

Nilfisk B.V.  
Versterkerstraat 5  
1322 AN Almere  
Tel.: (+31) 036 5460760  
[www.nilfisk.nl](http://www.nilfisk.nl)

## **HONG KONG**

Nilfisk Ltd.  
2001 HK Worsted Mills  
Industrial Building  
31-39, Wo Tong Tsui St.  
Kwai Chung, N.T.  
Tel.: (+852) 2427 5951  
[www.nilfisk.com](http://www.nilfisk.com)

## **HUNGARY**

Nilfisk Kft.  
II. Rákóczi Ferenc út 10  
2310 Szigetszentmiklós-Lakihegy  
Tel.: (+36) 24 475 550  
[www.nilfisk.hu](http://www.nilfisk.hu)

## **INDIA**

Nilfisk India Limited  
Pramukh Plaza, 'B' Wing, 4th floor,  
Unit No. 403  
Cardinal Gracious Road, Chakala  
Andheri (East) Mumbai 400 099  
Tel.: (+91) 22 6118 8188  
[www.nilfisk.in](http://www.nilfisk.in)

## **IRELAND**

Nilfisk  
1 Stokes Place  
St. Stephen's Green  
Dublin 2  
Tel.: (+35) 3 12 94 38 38  
[www.nilfisk.ie](http://www.nilfisk.ie)

## **ITALY**

Nilfisk SpA  
Strada Comunale della Braglia, 18  
26862 Guardamiglio (LO)  
Tel.: (+39) (0) 377 414021  
[www.nilfisk.it](http://www.nilfisk.it)

## **JAPAN**

Nilfisk Inc.  
1-6-6 Kita-shinyokohama, Kouhoku-ku  
Yokohama, 223-0059  
Tel.: (+81) 45548 2571  
[www.nilfisk.com](http://www.nilfisk.com)

## **MALAYSIA**

Nilfisk Sdn Bhd  
Sd 33, Jalan KIP 10  
Taman Perindustrian KIP  
Sri Damansara  
52200 Kuala Lumpur  
Tel.: (60) 3603 627 43 120  
[www.nilfisk.com](http://www.nilfisk.com)

## **MEXICO**

Nilfisk de Mexico, S. de R.L. de C.V.  
Pirineos #515 Int.  
60-70 Microparque  
Industrial WSantiago  
76120 Queretaro  
Tel.: (+52) (442) 427 77 00  
[www.nilfisk.com](http://www.nilfisk.com)

## **NEW ZEALAND**

Nilfisk Limited  
Suite F, Building E  
42 Tawa Drive  
0632 Albany Auckland  
Tel.: (+64) 9 414 1996  
Website: [www.nilfisk.com](http://www.nilfisk.com)

## **NORWAY**

Nilfisk AS  
Bjørnerudveien 24  
1266 Oslo  
Tel.: (+47) 22 75 17 80  
[www.nilfisk.no](http://www.nilfisk.no)

## **PERU**

Nilfisk S.A.C.  
Calle Boulevard 162, Of. 703, Lima  
33- Perú  
Lima  
Tel.: (511) 435-6840  
[www.nilfisk.com](http://www.nilfisk.com)

## **POLAND**

Nilfisk Sp. Z.O.O.  
Millenium Logistic Park  
ul. 3 Maja 8, Bud. B4  
05-800 Pruszków  
Tel.: (+48) 22 738 3750  
[www.nilfisk.pl](http://www.nilfisk.pl)

## **PORTUGAL**

Nilfisk Lda.  
Sintra Business Park  
Zona Industrial Da Abrunheira  
Edifício 1, 1º A  
P2710-089 Sintra  
Tel.: (+351) 21 911 2670  
[www.nilfisk.pt](http://www.nilfisk.pt)

## **RUSSIA**

Nilfisk LLC  
Vyatskaya str. 27, bld. 7/1st  
127015 Moscow  
Tel.: (+7) 495 783 9602  
[www.nilfisk.ru](http://www.nilfisk.ru)

## **SINGAPORE**

Den-Sin  
22 Tuas Avenue 2  
639453 Singapore  
Tel.: (+65) 6268 1006  
[www.densin.com](http://www.densin.com)

## **SLOVAKIA**

Nilfisk s.r.o.  
Bancíkovej 1/A  
SK-821 03 Bratislava  
Tel.: (+421) 910 222 928  
[www.nilfisk.sk](http://www.nilfisk.sk)

## **SOUTH AFRICA**

Nilfisk (Pty) Ltd  
Kimbult Office Park  
9 Zeiss Road  
Laser Park  
Honeydew  
Johannesburg  
Tel: +27118014600  
[www.nilfisk.co.za](http://www.nilfisk.co.za)

## **SOUTH KOREA**

Nilfisk Korea  
#204 2F Seoulup Kolon Digital  
Tower  
25 Seongsuil-ro 4-gil, Seongdong-gu  
Seoul.  
Tel.: (+ 82) 2 3474 4141  
[www.nilfisk.co.kr](http://www.nilfisk.co.kr)

## **SPAIN**

Nilfisk S.A.  
Torre d'Ara,  
Passeig del Rengle, 5 Plta. 10<sup>a</sup>  
08300 Mataró  
Tel.: (34) 93 741 2400  
[www.nilfisk.es](http://www.nilfisk.es)

## **SWEDEN**

Nilfisk AB  
Tallegårdsgatan 4  
431 53 Mölndal  
Tel.: (+46) 31 706 73 00  
[www.nilfisk.se](http://www.nilfisk.se)

## **SWITZERLAND**

Nilfisk AG  
Ringstrasse 19  
Kircheberg/Industri Stelz  
9500 Wil  
Tel.: (+41) 71 92 38 444  
[www.nilfisk.ch](http://www.nilfisk.ch)

## **TAIWAN**

Nilfisk Ltd  
Taiwan Branch (H.K)  
No. 5, Wan Fang Road  
Taipei  
Tel.: (+88) 6227 00 22 68  
[www.nilfisk.tw](http://www.nilfisk.tw)

## **THAILAND**

Nilfisk Co. Ltd.  
89 Soi Chokechai-Ruammitr  
Viphavadee-Rangsit Road  
Lad Yao, Jatuchak, Bangkok 10900  
Tel.: (+66) 2275 5630  
[www.nilfisk.co.th](http://www.nilfisk.co.th)

## **TURKEY**

Nilfisk A.S.  
Serifli Mh. Bayraktar Bulv. Sehit Sk. No:7  
Ümraniye, 34775 İstanbul  
Tel.: +90 216 466 94 94  
[www.nilfisk.com.tr](http://www.nilfisk.com.tr)

## **UNITED ARAB EMIRATES**

Nilfisk Middle East Branch  
SAIF-Zone  
P.O. Box 122298  
Sharjah  
Tel.: (+971) (0) 655-78813  
[www.nilfisk.com](http://www.nilfisk.com)

## **UNITED KINGDOM**

Nilfisk Ltd.  
Nilfisk House, Bowerbank Way  
Giwilly Industrial Estate, Penrith  
Cumbria CA11 9BQ  
Tel: (+44) (0) 1768 868995  
[www.nilfisk.co.uk](http://www.nilfisk.co.uk)

## **UNITED STATES**

Nilfisk, Inc.  
9435 Winnetka Ave N,  
Brooklyn Park  
MN- 55445  
[www.nilfisk.com](http://www.nilfisk.com)

## **VIETNAM**

Nilfisk Vietnam  
No. 51 Doc Ngu Str.  
P. Vinh Phúc, Q.Ba Dinh  
Hanoi  
Tel.: (+84) 761 5642  
[www.nilfisk.com](http://www.nilfisk.com)

